



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626
Phone (714) 426-0590 Fax (714) 426-0591

950-61135
1994 - UP
GM "S" SERIES PICK UP
TAILGATE HANDLE RELOCATOR

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.



PARTS LIST					
1	Handle Relocator	1	Instruction Sheet	4	# 8 X 3/4" Washer Head Screws
1	Filler Plate	1	Street Scene Decal		

TOOL LIST	
Drill Motor, 5/32" Drill Bit, 3/8" Ratchet, Socket Set, Flat Blade Screwdriver, Phillips Screwdriver,	
Tape Measure, Saber Saw Or Die Grinder, Mig Welder	

1. Remove tailgate from the truck and place on a covered table or bench.
2. Remove the plastic trim that fits around the handle.
3. Turn tailgate over and remove the handle and end latches.
4. Now place the template over the factory bolt holes and line up the top of the template with the top of the tailgate, trace out dotted line area. This is the area that needs to be cut out by using a cutting wheel or die grinder.
5. Now your ready to install your relocater kit. Bolt in the handle using only two bolts.
6. Install the relocater kit into the back of the tailgate. Using your fingers snap the rods into the handle. Drill the four mounting holes with a 5/32" drill bit and screw the relocatorkit into place. Test the handle to make sure it works freely.
7. Place supplied filler plate over existing hole and tack weld into place. We recommend a mig (wire feed) welder. **NOTE:** Welding one continuous weld will cause tailgate to warp. Tack a small area and let cool then repeat until complete. **NOTE:** If you do not have a mig welder we recommend using a professional welder to have this done.

Line Up Holes On Template To Tailgate

950-61135

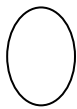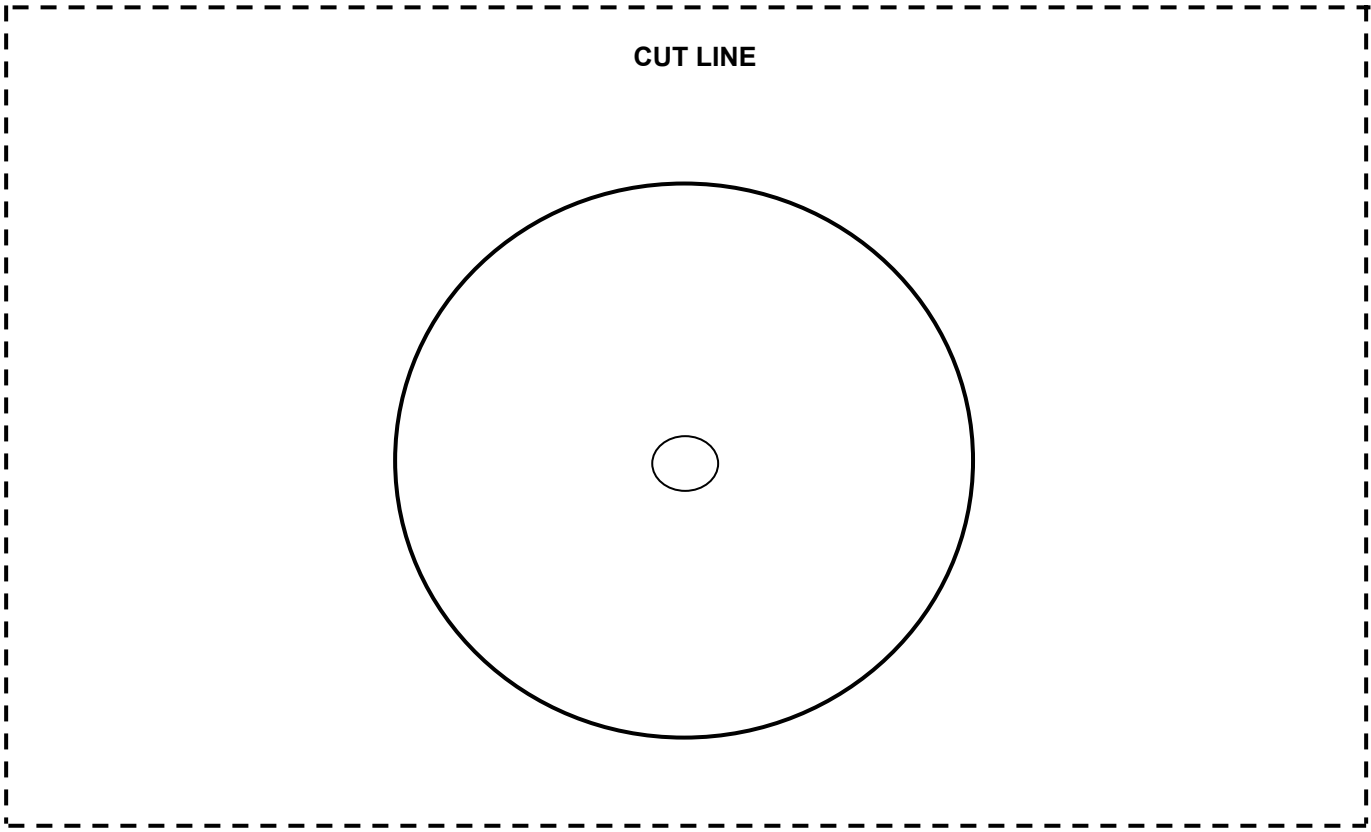

FACTORY BOLT HOLES