



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

950-70235
 CHEVY CAMARO
 2010
 V-6 V-8 NON SS
 LOWER GRILLE DUCTS
 PAIR URETHANE

INSTALLATION INSTRUCTIONS

NOTE: Fit all parts before painting (See Special Instructions For Paint Prep.) Parts that have been installed, preped, or painted are not returnable.

NOTE:

Check fit all body parts PRIOR to paint. Follow urethane prep instructions before painting. Take your time and pre-fit all pieces so that they will have a tight fit to the body.

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE:

We recommend you install Splitter, Air Ducts, and the Grilles at the same time. That way you only have to pull the fascia off one time.

PARTS LIST					
1	Grille Ducts Pair	1	Instruction Sheet	4 FT	1/2" Two Sided Tape # 75344
		1	Urethane Prep Sheet	2 PKGS	3M Adhesion Promoter

TOOL LIST
10MM Socket, Ratchet Torx-20, Flat Blade Screwdriver,

1. Open hood. Then you will need to pull the front fascia off to install the Street Scene Grille Ducts. To do this after opening the hood across top top of fascia you will need to remove the 10MM bolts and 6 push in fasteners. Then there are two more bolts on the bottom of fascia. See photos below.



2. Next on the inside of the wheel well there will be 3 screws on each side. Use a Torx20 to remove. Then pull open splash guard open. There will be one 7MM bolt and 3 more 10MM bolts. You will have to reach in to remove. See photos below NOTE: One of the screws is on each side of the blinker and the last one is right below the head light.



3. Slide off the front fascia but you will to un-plug the wires for the lights. See photo below.



4. Now unplug the lights and place the front fascia on a soft cover bench. Hold the Street Scene Splitter in place to see where it will be installed. You will need to clean with the 3M Promoter where the two sided tape will be used. Both the Splitter and the bottom of fascia will need to be cleaned.

5. Now you will need to remove the grille support and the lower stock grille insert. See photo below.




GRILLE SUPPORT



STOCK LOWER GRILLE INSERT

6. The lower valance stock grille will just pull out by unfastening the mounting tabs.

7. Next is to install the grille ducts, You only will have to use the two sided tape for this. See below for tape line.

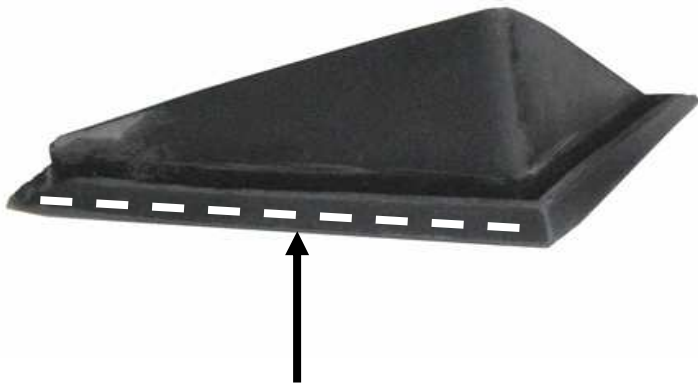

Bottom Of Grille Duct



Top Of Grille Duct



Left Grille Duct



Right Grille Duct

8. Now your ready to install fascia back onto the vehicle in reverse order as you took off.