



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

950-70236
 2010
 CHEVY CAMARO
 V-6 / V-8 NON SS
 SPLITTER URETHANE

INSTALLATION INSTRUCTIONS

NOTE: Fit all parts before painting (See Special Instructions For Paint Prep.) Parts that have been installed, preped, or painted are not returnable.

NOTE:

Check fit all body parts PRIOR to paint. Follow urethane prep instructions before painting. Take your time and pre-fit all pieces so that they will have a tight fit to the body.

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE:

We recommend you install Splitter, Air Ducts, and the Grilles at the same time. That way you only have to pull the fascia off one time.

PARTS LIST					
1	Front Splitter	1	Instruction Sheet	4	# 10 Self Tapping Screws
		1	Urethane Prep Sheet	4	Tinnerman Nuts
4 FT.	1/2" Two Sided Tape			3 PKGS	3M Adhesion Promoter

TOOL LIST
10MM Socket, Ratchet Torx-20, Flat Blade Screwdriver,

1. Open hood. Then you will need to pull the front fascia off to install the Street Scene Splitter. To do this after opening the hood across top top of fascia you will need to remove the 10MM bolts and 6 push in fasteners. Then there are two more bolts on the bottom of fascia. See photos below.



2. Next on the inside of the wheel well there will be 3 screws on each side. Use a Torx20 to remove. Then pull open splash guard open. There will be one 7MM bolt and 3 more 10MM bolts. You will have to reach in to remove. See photos below NOTE: One of the screws is on each side of the blinker and the last one is right below the head light.




3. Slide off the front fascia but you will have to un-plug the wires for the lights. See photo below.



4. Now unplug the lights and place the front fascia on a soft cover bench. Hold the Street Scene Splitter in place to see where it will be installed. You will need to clean with the 3M Promoter where the two sided tape will be used. Both the Splitter and the bottom of fascia will need to be cleaned.

5. Placement of two sided tape on the Street Scene Splitter.

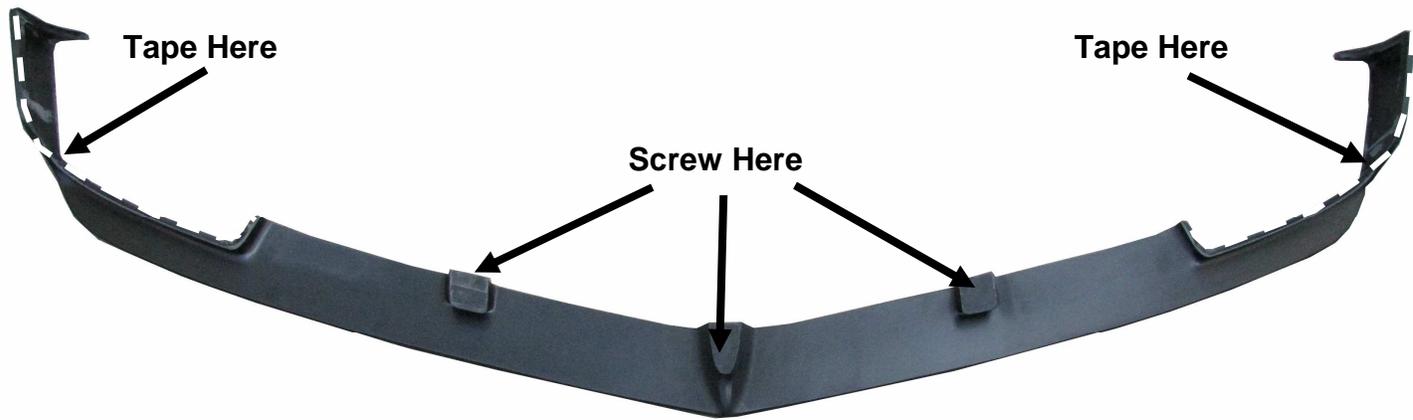

6. With the help of another person place your splitter into position where the two sided tape is first. Then where the 3 bosses are you will use the screws provided. Install two in the center boss and one in each of the other two bosses. Use the #10 self tapping screw and on the other side use the tinnerman nut to tighten.



7. Now your ready to install fascia back onto the vehicle in reverse order as you took off.