



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, CA. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-70317

2003-2008 NISSAN 350Z

GENERATION 1

FRONT BUMPER COVER

URETHANE

INSTALLATION INSTRUCTIONS

NOTE: Fit all parts before painting (See Special Instructions For Paint Prep.) Parts that have been installed, preped, or painted are not returnable.

VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Urethane Front Bumper	1	Instruction Sheet	1	Urethane Prep Sheet
6	#6x1/2" (06050)				

TOOL LIST	
Power Drill, Assorted Sockets and Wrenches	

1. Start by removing the clips on the topside of the front fascia (**FIG.1**)
2. Remove the screws that join the front fascia and fender by pulling away the inner fender well cover (**FIG.2**).
3. Next you will need to remove the various screws on the underside of the vehicle holding on the splash guard (**FIG.3**)
4. Reinstall the new fascia onto the vehicle as the stock fascia was removed. You will need to drill out the indentations that mark the guide holes first.

NOTE: IF YOU OWN 2003-2006 350Z YOU CAN REUSE ALL OF YOUR STOCK HARDWARE. IF YOU OWN A 2007+ 350Z YOU WILL NEED TO USE THE PROVIDED SCREWS FOR ATTACHING THE BOTTOM OF THE FASCIA TO THE SPASH GUARD. BE SURE TO MAKE PILOT HOLES BEFORE USING THE SELF-TAPPING SCREWS.

5. Done! Enjoy the looks of your new Street Scene front fascia bumper!

Figure 1

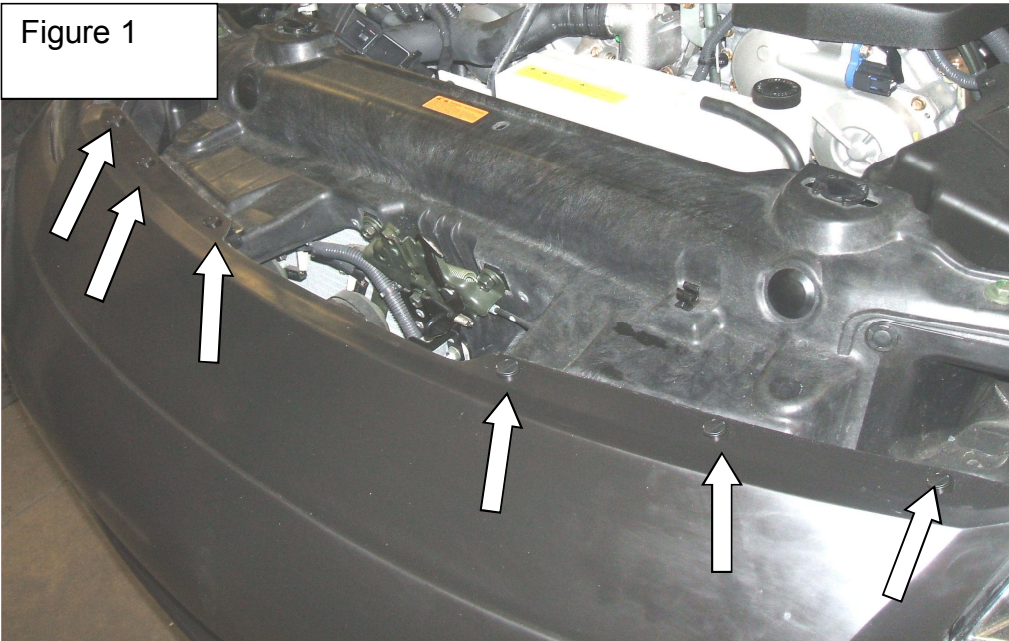


Figure 2

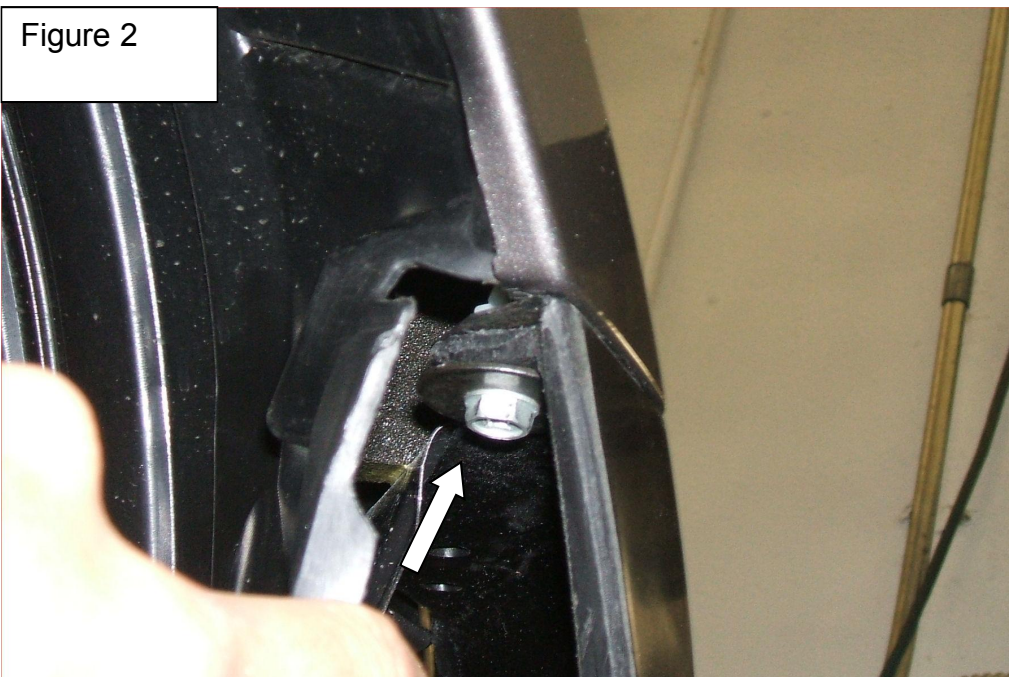


Figure 3

