



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-70704

2004 - 2006

FORD F-150

WIPER COWL

INSTALLATION INSTRUCTIONS

NOTE: Fit all parts before painting (See special instructions for paint Prep.) Parts that have been installed, prepped, or painted are not returnable.


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Wiper Cowl	1	Instruction Sheet	1	Fiberglass Paint Prep Sheet
				2	Sheet Metal Screws PN 005-71834
4	8/32 X 1/2" Machine Screws PN 005-00839			4	8/32 K Nut PN 005-00498
8	Height Adjusting Washers PN 005-01021			2	Mounting Brackets PN 01019

TOOL LIST	
Drill Motor, Phillips Screwdriver, Safety Glasses, 1/8" Drill Bit, 1/4" Wrench, 11/32 Wrench	

1. Remove windshield wipers by lifting the locking arm up at the base of the wiper arms and sliding the arm off of the splined shaft.
 2. Remove the factory wiper cowl by pulling upward at the windshield side releasing the " Snap Retainers "
- NOTE:** The hood side is retained by tabs. Take note of this for installation of Street Scene Wiper Cowl.
3. Disconnect washer hose. Remove washer nozzels and install in new wiper cowl.
 4. Install the wiper cowl mounting brackets on the hood hinges. Just above the mounting bolts there is a hole in the hood hinge that will be used to mount bracket. Refer to illustration □ and mount bracket to hinge. There are two mounting holes in bracket. Use the rear hole in bracket in each side. On some vehicles there will not be a hole in hinge. It will be necessary to drill a 3/16" hole in the hinge to install the bracket. Refer to illustration □ for drilling.

ILLUSTRATION □

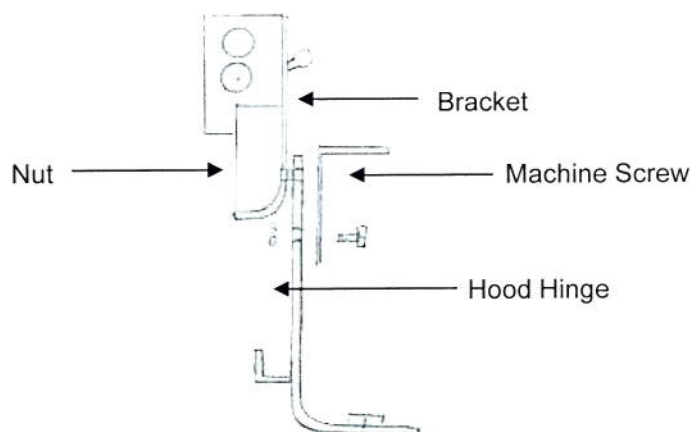


Driver's Side From Front Of Truck

5. Mark hood hinge location on hood. With the aid of a friend, remove the hood.
6. Install the Street Scene wiper cowl to vehicle by sliding the front edge under the tabs observed in step two.
7. Drill a 1/8" hole on each end in the recession and into the mounting bracket. Use the sheet metal screw provided and secure wiper cowl to bracket. If cowl does not fit flush with fender, shim it up with washers provided. Re-attach windshield washer hose.
8. Re-install hood. Use marked locations as a guide for hood alignment.
9. Install wipers. Make sure to lock arms to shaft.

12/11/03 SSE 950-70704

ILLUSTRATION ☐ ON OTHER SIDE

ILLUSTRATION ☐

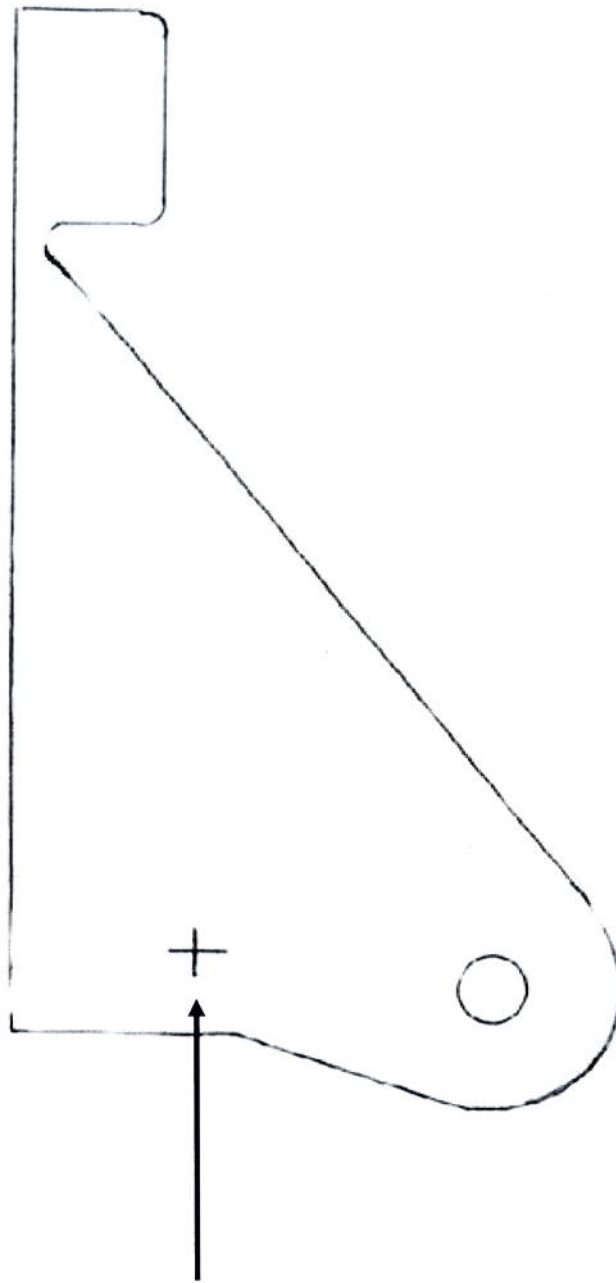

Drill 3/16" Hole

Hood Hinge Driver's Side