



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-70742

2005

FORD MUSTANG GT
SIDE SKIRT SET
W / DOOR FILLERS

INSTALLATION INSTRUCTIONS

NOTE: Fit all parts before painting (See Special Instructions For Paint Prep.) Parts that have been installed, preped, or painted are not returnable.

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


PARTS LIST					
1	RT Side Skirt	1	Instruction Sheet	40 FT	1/2" Wide Two Sided Tape
1	LT Side Skirt	1	Urethane Prep Sheet	1	Street Scene Decal
1	RT Door Filler	1	LT Door Filler	10	Silver Attaching Screws

TOOL LIST	
1/8" Drill Bit, Drill Motor, Phillips Screwdriver	

NOTE: For proper adhesion of the two sided tape you must follow paint and prep instructions. The back side of body parts must be cleaned and sanded thoroughly. Adhesion promoter should be used for installation of all urethane parts.

PHOTO I

1. Remove the OEM lower body side moldings. Remove the white fastening inserts in rocker panel. See Photo I .

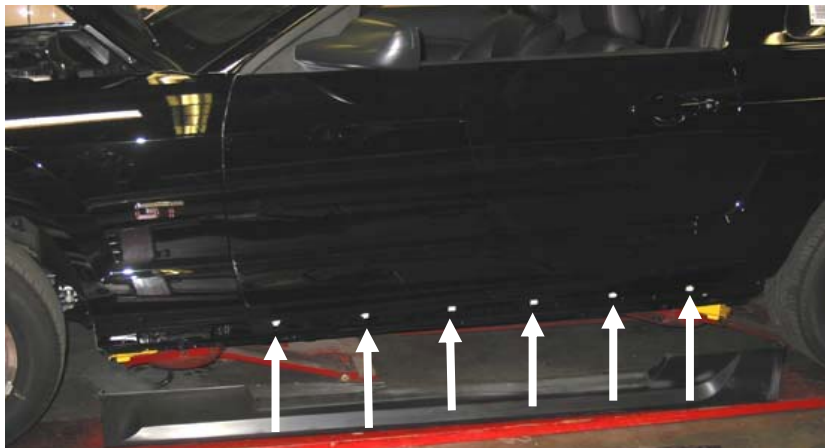

2. Set side skirts to body and check for fitment. Fit as necessary.
3. Thoroughly clean, scuff and apply adhesive promoter along the areas designated photo II . Upon completion apply the tape to the same areas. NOTE: In two small sections, two layers of tape are required.

PHOTO II



4. Set the side skirt to vehicle and align skirt at the front and rear wheel housing. Mark body where skirt makes contact. Remove skirt and scuff up paint on body with a " Scotch Brite Pad " being careful not scuff body above the paint that skirt mounts too. (Paint must be debris and wax free to insure proper tape adhesive).
5. Mount skirt to body by removing backing on tape and applying pressure on skirt. Drill an 1/8" hole on the front edge of skirt into the wheel well lip. Install a screw and tighten. Drill two 1/8" holes in the back side and install two mounting screws and tighten. Drill two more 1/8" holes as shown in photo 3 and install two more mounting screws to the underside of body. DO NOT omit these screws.
(HINT: It is sometimes best to remove tape backing in small increments as you work down the length of the part).

PHOTO III



6. Set the door filler panel on door, Mark it's top edge on door. Remove panel and scuff the paint area below the mark with a " Scotch Brite Pad ". Remove the backing on the two sided tape and install filler on door while alligning. From the inside of door frame drill two 1/8" holes as shown in photo IV. Install two attaching screws and tighten.

PHOTO IV



1/8" Clearence Holes (2 Places)
1/2" In X 1/2" Up From Door Edges And Bottom Edge