



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
Costa Mesa, Ca. 92626  
Phone (714) 426-0590 Fax (714) 426-0591

950-70790  
2010  
FORD MUSTANG GT  
FRONT FASCIA

## INSTALLATION INSTRUCTIONS

**NOTE:** Fit all parts before painting ( See Special Instructions For Paint Prep. ) Parts that have been installed, preped, or painted are not returnable.


**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

| PARTS LIST |                  |   |                     |    |                   |
|------------|------------------|---|---------------------|----|-------------------|
| 1          | SSE Front Fascia | 1 | Instruction Sheet   | 10 | Push In Fasteners |
|            |                  | 1 | Urethane Prep Sheet |    |                   |
|            |                  |   |                     |    |                   |

| TOOL LIST  |
|--|
| 10 MM Wrench Or Socket, Flat Blade Screwdriver, Grinder, |

1. Open hood.
2. Remove air deflector panel between the grille and radiator by prying up the six push in fasteners. See figure one

**FIGURE ONE**

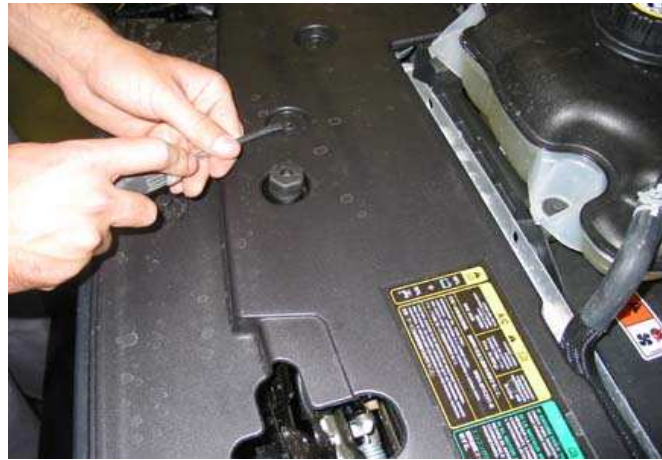

3. Remove the two torx head screws located to the right and left of panel. See figure two

**FIGURE TWO**



4. Pry-out the four push in fasteners located on the underside of car connecting the rubber air deflector of fascia. It is not necessary to remove panel from vehicle.

5. Remove the two fasteners at the front of fender wells on each side of car. See figure three.

**FIGURE THREE**



6. Reach up to the outer side corners of OEM fascia and remove the three 10 MM nuts securing it to the fender. See figure four. Unplug marker lamps. See figure five.

**FIGURE FOUR**



**FIGURE FIVE**



7. With the aid of another person remove the OEM fascia. NOTE: ( Grille will be attached to fascia ). See figure six. While unplugging the GT lights in grille. See figure seven.

**FIGURE SIX**



**FIGURE SEVEN**



8. Remove the grille shell from fascia by inserting a small flat screwdriver into the attaching points to release. See figure eight.

**FIGURE EIGHT**



9. Grind or drill out the rivets holding the marker lamps to the fascia and remove lamps and corner brace. See figure nine.

**FIGURE NINE**



10. Pre-fit SSE fascia, prep as instructed and paint to match.
11. Install lamps removed in step nine to SSE fascia. Install Grille Shell to fascia.
12. With the aid again of another person install the SSE fascia to vehicle and install the two torx head screws removed in step three. DO NOT tighten at this time.
13. Install the 10 MM head nuts to the inner corners of fascia. Align fascia with fenders and tighten. Install the screws removed in step five. Tighten all fasteners after alligning fascia.
14. Plug in wires to lamps connect the lower rubber air deflector to bottom of fascia. Using four of the new press in fasteners supplied.
15. Install the upper air deflector using the remaining six push in fasteners.
16. If installing Speed Grilles to your Mustang, Install them before installing fascia.