



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
Costa Mesa, CA. 92626  
Phone (714) 426-0590 Fax (714) 426-0591

950-70791  
2010-2013  
FORD MUSTANG  
SIDE SKIRTS URETHANE

### INSTALLATION INSTRUCTIONS

**NOTE: Fit all parts before painting (See Special Instructions For Paint Prep.) Parts that have been installed, preped, or painted are not returnable.**

**VERY IMPORTANT!** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
2	Side Skirts	16FT	1/2" Double Sided Tape		
4	No.10 Washerhead Screws	2	Adhesive Promoter		

TOOL LIST	
Sandpaper/Schotchbrite Drill & Assorted Drille Bits	

1. First you will need to remove the stock side skirts from the vehicle. They are held on by plastic clips.
2. After the side skirts are prepped and painted, double-sided tape should be applied to the indentation on the inside of the side skirts. This surface has to be CLEAN and DRY for the tape to properly adhere. A residual-free cleaner is recommended (e.g. Wurth <sup>TM</sup> Clean-Solve) to prepare the surface. The surface of the vehicle should also be prepped and cleaned for proper adhesion **(Fig.1)** For BEST results after cleaning; use of an adhesion promoter such as 3M <sup>TM</sup> part #06396 should be applied to wherever tape will be used. When applying tape, make sure that tape is smooth and wrinkle free.
3. After applying the tape, pull back approximately 1 inch of protective covering from the tape on each end. Make sure the film is sticking out. **(Fig.2)** Place the side skirt GENTLY on the vehicle and make sure you have it positioned correctly. If adhesion promoter was used you will NOT get a second chance! While holding it in position, pull the tabs you created while applying light downward pressure. Continue this taking care not to tear off the tabs by pulling to hard. After all the film is removed, apply firm pressure all around to insure the tape has bonded properly.
4. Drill 1 small pilot hole onto both ends of the side skirt and use the provided screws to secure the side skirt onto the vehicle.
5. Done! Enjoy the looks of your new Street Scene side skirts.

Figure 1

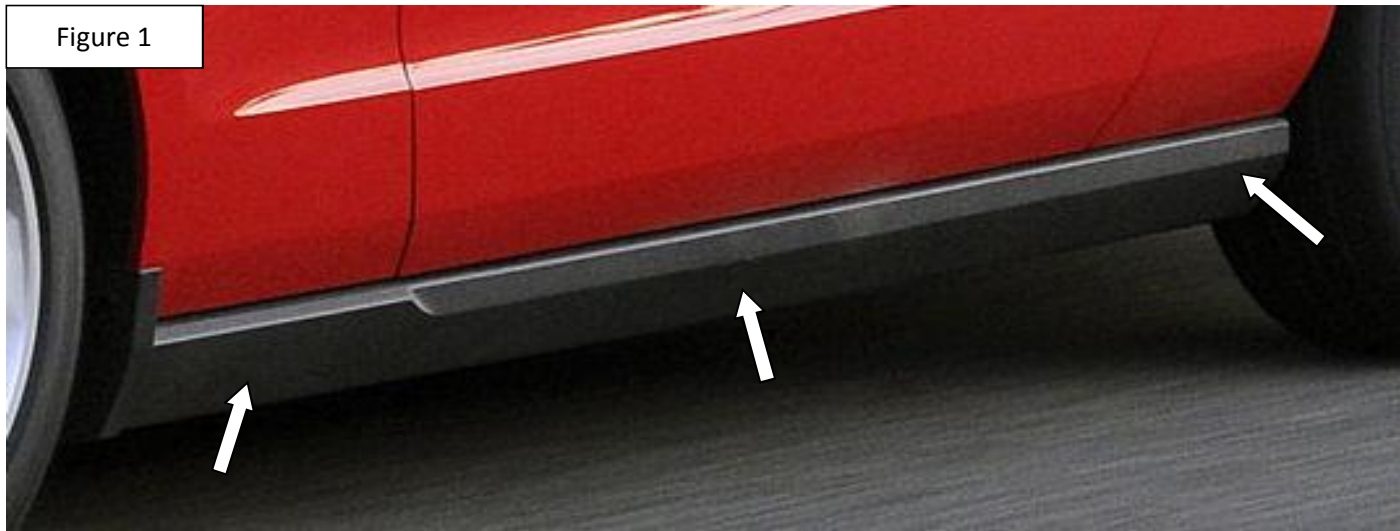


Figure 2

