



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
Costa Mesa, CA. 92626  
Phone (714) 426-0590 Fax (714) 426-0591

950-70898  
2013-2014  
FORD FOCUS ST  
SIDE SKIRT KIT  
2 PIECE FIBERGLASS

### INSTALLATION INSTRUCTIONS

Check fit all body parts PRIOR to paint. Follow urethane prep instructions before painting. Take your time and pre-fit all pieces so that they will have a tight fit to the body.

**VERY IMPORTANT!** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Front Left	1	Instruction Sheet		
1	Front Right	1	Fiberglass Prep Sheet		

TOOL LIST	
Various Tools	


1. First you will need to jack up the car on the side you are working on. Underneath there will be 6 Plastic clips that hold on the factory side rocker.



2. Line up the Street Scene Side skirts with the holes and reinstall the Push-Pins into the whole. Repeat the same process on the other side.



3. Once complete, lower the car back to the ground and check the side profiles for any imperfections. Your car should look like this as the end result.

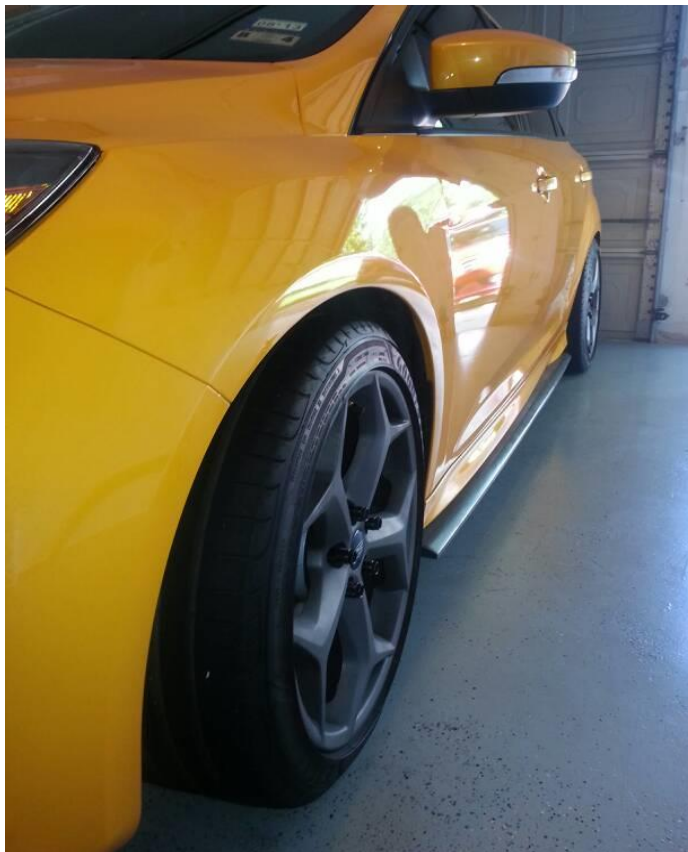

4. Congratulations, you have successfully installed Street Scene side skirts on your 2013-2014 Ford Focus ST!

