



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-73600

FORD MUSTANG 6 CYL

2005 - 2009

CENTER MOUNT GRILLE

SHELL CONVERSION PACKAGE

## INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Grille Shell	2	Instruction Sheet	1	Driving Lights # 30090
		1	Wire Harness Loom		

### NOTE:

YOU WILL HAVE TWO SET OF INSTRUCTIONS IN THIS KIT ONE FOR THE GRILLE SHELL

AND ONE FOR THE WIRE HARNESS LOOM

AS FAR AS THE LIGHTS ALL YOU NEED TO DO IS INSTALL THEM ON YOUR NEW GRILLE SHELL



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-73596

FORD MUSTANG 6 CYL

2005 - 2006

PLASTIC GRILLE SHELL  
WITH CENTER MOUNT STYLE

### INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

**NOTE: THIS KIT FITS V-6 MUSTANG ONLY**

**NOTE:**

**USE STREET SCENE DRIVING LIGHTS PART NUMBER 950-30090**

**NOTE:**

**USE STREET SCENE WIRE HARNESS KIT P.N. 950-73591**

**KIT IS COMPLETE WITH EVERYTHING YOU NEED FOR A FACTORY LOOK INSTALLATION**

#### PARTS LIST

1	Grille Shell	1	Instruction Sheet		

#### TOOL LIST

Flat Blade Screwdriver, Panel Removal Tool, Phillips Head Screwdriver

1. Open hood.
2. Remove the header panel between the grille and core support by prying up the center pin and then prying up the body of the retainer. See photos below.

**PHOTO # 1**



**PHOTO # 2**



Remove Panel

3. Remove the OEM grille by using a flat blade screwdriver and prying the tab on the fascia while depressing the locking tab on the grille. Do both sides first and then the bottom, gently pulling forward as you go. See photos below


**PHOTO # 3**



**PHOTO # 4**



4. Install the Street Scene wire harness at this time.
5. Set the Street Scene grille shell face down on the table. Be sure to cover table so that the grille does not get scratched. Place the fog lamps onto their mounting posts. Use the supplied screws and fasten them to the grille shell.
6. Install the Street Scene grille shell . Plug in the lamps sockets and align the tabs on grille with the slots in fascia.

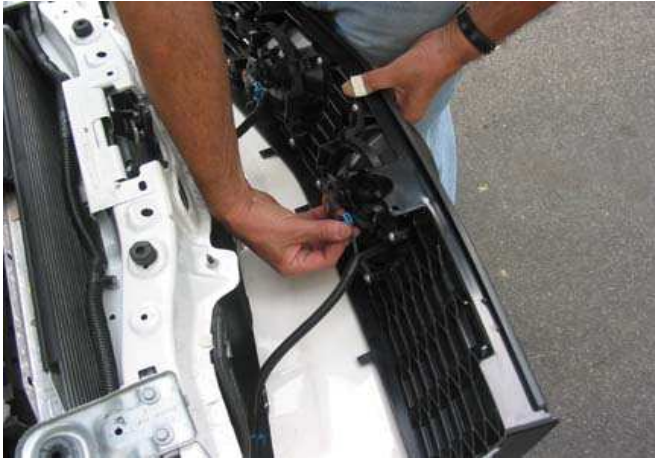

7. Snap the entire grille into fascia
8. If needed the lamps can be adjusted at this time with a screwdriver turn adjuster screw clockwise or counter clock wise to adjust. See OEM specification manual for adjustment. See Photo below



9. Replace the top panel using the fasteners removed in step # 2. See Photo below.





## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-73591

6 CYL. MUSTANG LIGHT  
CONVERSION LOOM

### INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

**USE THIS WIRE HARNESS WITH S/S GRILLE KIT 950-74591 ETC.**

#### PARTS LIST

1	Wire Harness Loom		10	11" Cable Ties
1	Instruction Sheet		1	Quick Splice Connector

#### TOOL LIST

Flat Blade Screwdriver, Panel removal tool ( Optional ) , Drill Motor, 1/4" Drill Bit, 1/8" Drill Bit, 3/4" Hole Saw Or Unibit ( Preferred ), Ratchet, Extension, 10 MM Socket, Small File, Round File, Pliers, Side Cut Pliers

1. Unroll harness and identify connections. ( Lamp, Battery, Ground, and switch ). Unplug switch from harness and set aside.
2. Open hood and prop up securely.
3. Pry up the center pin on the six fasteners securing the panel and then pry out the body. Save for reassemble. Remove panel see photos 1 & 2.

**PHOTO 1**



**PHOTO 2**



4. Remove the grille from vehicle by pressing the tab on body toward the grille while depressing the tab on the grille shell. Use the flat blade screwdriver to help. See photo 3

**PHOTO 3**





5. Starting at the fuse box. See photo 4

**PHOTO 4**



**PHOTO 5**



connect the relay to the bolt shown in photo # 5. Make sure to relay plug connection is facing down. If you like you may drill out the hole in relay to 1/4" inch.


6. Route the red wire with fuse holder toward the fuse box to the side where the battery cable enters the box. See photo # 6 Connect wire to terminal as shown. See photos number 5 & 6.

**PHOTO 6**



7. File a small slot as shown in photo 7 to run wire into fuse box so that the cover will close See Photo 7.

**PHOTO 7**

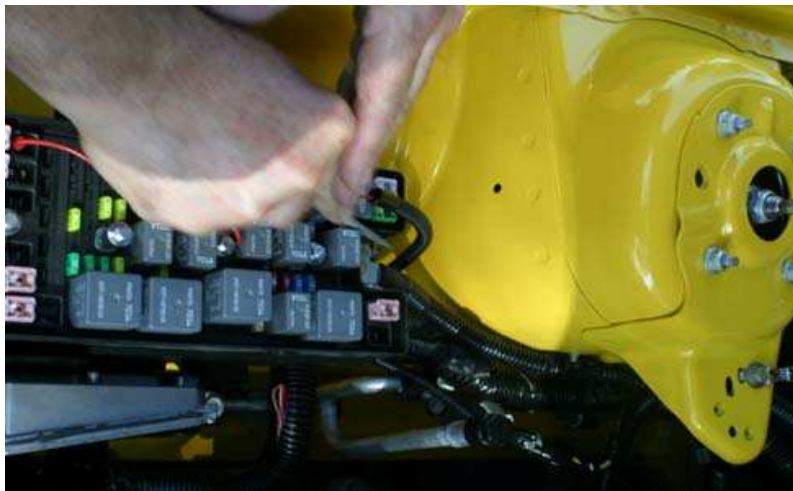


8. Route the harness under the radiator brace ( see photo 8 ) and across the front of vehicle. Make sure the fog lamps plugs are routed to front of vehicle. See photo 9.

**PHOTO 8**



**PHOTO 9**

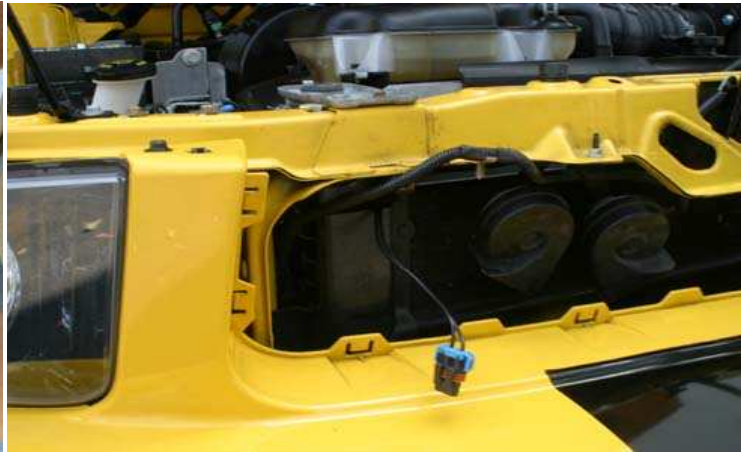

9. Connect the ground wire ( black wire with ring connector ) to the OEM ground bolt on core support. See photo 10

**PHOTO 10**



10. Route the remaining harness along the driver's side fender as shown in photo 11, fastening to the hood release cable with the cable ties provided.

**PHOTO 11**





11. Go inside the vehicle and pop out the rubber boot to the left of the brake pedal. See photo 12.

**PHOTO 12**



Route the harness down fire wall and through vacated hole. Cut a small X into the rubber boot as indicated by arrow in photo 12. Route the wire harness through this hole and thru boot. Replace rubber boot back into vehicle. Make sure boot is sealed completely in hole.

12. Remove headlamp switch from dash. The switch "Snaps" into dash. Pull to remove or carefully pry up to the bottom side being careful not to scratch. See photo 13.

**PHOTO 13**



**PHOTO 14**



Route the harness wire thru the hole vacated by headlamp switch. See photo 14. Unplug head lamp switch and remove from vehicle.

13. Carefully drill a 51/64" or 20MM hole in switch as shown in photo # 15. Using a hole saw or a unibit ( preferred method ) NOTE: drill a small pilot hole before. If you do not have a 51/64 or 20 MM hole saw a 3/4" hole saw can be used and can be slightly enlarged with a file. Take your time when doing this so that the switch will have a tight fit. See photo 15. Snap in switch as shown in photo 16.

**PHOTO 15**



**PHOTO 16**





14. Plug the OEM wire harness into head lamp switch. Plug the Street Scene wire harness into the switch install in step 13. Unwrap the black tape on the wires going to the head lamp switch. Locate the RED WITH WHITE STRIPE wire from switch. Connect the RED wire from wire loom to this wire using the Quick Splice connector provided. **DO NOT CUT WIRE** See photo 17.

**PHOTO 17**



**PHOTO 18**



Snap the light switch back into dash. See photo 18. Use the cable ties provided and secure the wire harness under the dash. Be sure to keep harness clear of E brake.

15. Install the Street Scene replacement grille. Follow grille instructions.