



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, CA. 92626
Phone (714) 426-0590 Fax (714) 426-0591

950-77741 SATIN FINISH
950-78741 CHROME FINISH
950-74741 BLK PWDR COAT
950-76741 BLACK CHROME
2006-2010 FORD EXPLORER
XLS, XLT, LIMITED
WILL NOT FIT IRONMAN
& EDDIE BAUER MODELS

INSTALLATION INSTRUCTIONS


VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	4	Installation Clips # 71099
2	S/S Thruss Head Screw			2	Upper Mounting Bracket (66180)
4	# 6 X 1/2" Phillips Self Drilling Screw			2	Black Plastic Retainer Nut
1	Care For Grilles				

TOOL LIST	
Flat Blade Screwdriver, Small Phillips Screwdriver, # 2 Phillips Screwdriver	

1. It is possible to install the Speed Grille Insert without removing the grille shell from vehicle. The instructions are for removing the grille shell. It will be difficult to install the bottom clips but not impossible Your option.
2. To remove the grille shell assemble remove the six retainers across the top of grille shell.
3. Disconnect the lower fastener. Once you are sure all fasteners are removed pull grille shell to remove from vehicle.
4. Remove the Ford logo from grille. This can be re-installed later by bending the tabs back and forth to break off. Use double sided tape (**Not Supplied**) and apply to back side and install over Speed Grille.
5. Set the Speed Grille insert over the horizontal bars on grille (If you like you can mask off the chrome surround and paint the horizontal bars black before installing). Attach the bottom to grille shell using the fastening clips provided. The photo below will guide you in the placement of the clips.

PHOTO

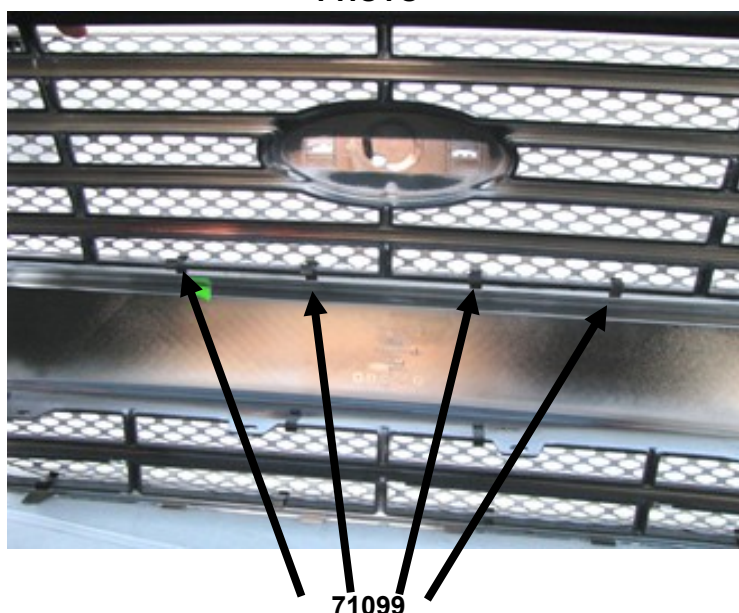


THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

07/01/15 SSE 950-77741, 950-78741, 950-74741, 950-76741

Install the clips as shown in the drawing below

TYPICAL CLIP INSTALLATION

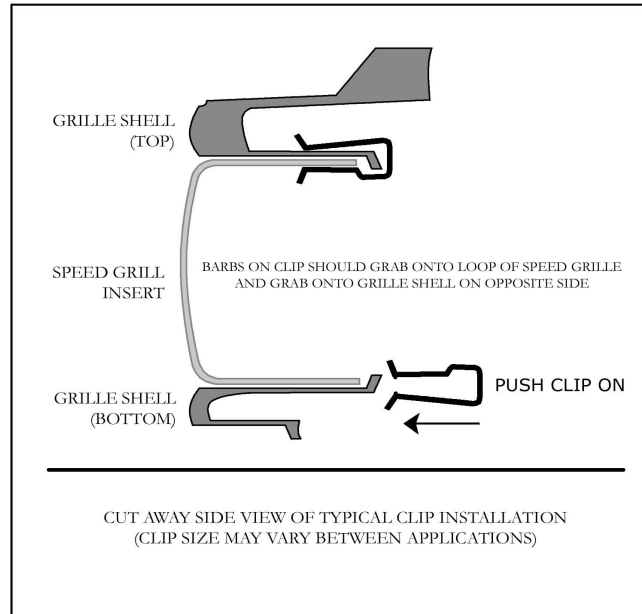

6. Snap the black plastic retaining nut into the brackets as shown in the photo below.

PHOTO



7. Set the retainer and nut assemble on top of the top horizontal bar on grille and install the large thruss head screw loosely. Push the top of the Speed Grille in and fasten the brackets using the screws provided. See photo below

PHOTO

Top Of Grille



Close Up Of Screws

