



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-74866 BLK PWDR COAT

950-77866 SATIN FINISH

1998-2000

TOYOTA TACOMA

4WD & PRE-RUNNER



MAIN GRILLE INSERT


INSTALLATION INSTRUCTIONS

VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.


PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	6	Installation Clips # 71098 (3/4" Long)
1	Care For Grilles Sheet	1	Street Scene Emblem	6	Installation Clips # 71093 (5/8" Long)
				1 FT.	2" wide Two Sided Tape

TOOL LIST	
10 MM Wrench, Flat Blade Screwdriver	

1. Remove Grille Shell from vehicle by gently pulling to release the four attaching fasteners across the top and the three across the bottom. You may squeeze the fastener on the top and bottom sides of it to release it.
2. Remove the Toyota logo from grille.
3. Set the Speed Grille over the existing bars. Fasten the bottom side using the 5/8" long clips. Make sure Speed Grille reaches the back edge of the OE grille. Push the top side in and fasten from the backside using the 3/4" long clips. Refer to Illustration  for clip placement and Illustration  for clip installation. To ease clip installation use a small flat blade screwdriver and gently lift the edge of clip over the grille while inserting.
4. To install the Toyota logo to Speed Grille remove all tabs on the back side of logo. Adhere the two sided tape to logo and using an X-acto knife cut around the logo. Remove backing and install to Speed Grille.
5. Re-install Grille Shell to vehicle.

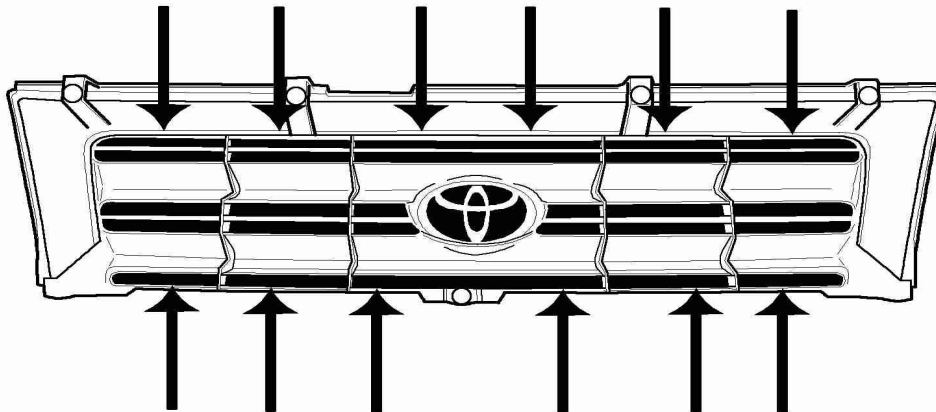

ILLUSTRATION 

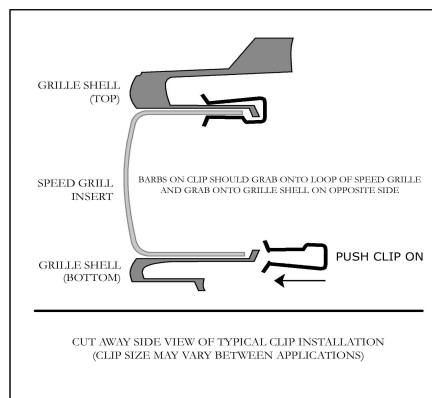

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

3/10/16 SSE 950-74866 & 950-77866