

STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue Costa Mesa, Ca. 92626 Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS


950-76134 BLACK CHROME 950-77134 SATIN FINISH 950-78134CHROME FINISH 2006 - 2008 CHEVY TRAILBLAZER LT BUMPER SPEED GRILLE INSERTS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST						
1	Speed Grille Insert	1	Instruction Sheet	1	RT Speed Grille Insert	
1	Care For Grilles	1	Street Scene Emblem	1	LT Speed Grille Insert	
1	Center Speed Grille	Insert		16	Installation Clips # 71098	

TOOL LIST	
NO TOOLS REQUIRED	

- 1. Install the Speed Grille inserts one at a time into the openings in the bumper. Make sure you install the correct Speed Grille insert in the right and left sides.
- 2. To fasten the grilles in bumper cover use the retaining clips provided. Four clips are required at the right and left sides and eight are required in the center section. Clip Speed Grille inserts on the top and the bottom.
- 3. The illustration below shows how to install the retaining clips.

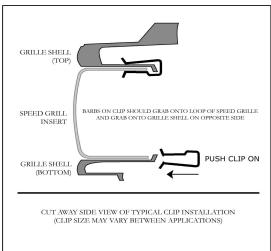

TYPICAL CLIPPING INSTALLATION

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420, 961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.