



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77144 SATIN FINISH

&

950-78144 CHROME FINISH

2003 - 2006

CHEVY SILVERADO

SS BUMPER COVER

SPEED GRILLES

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE:

Speed Grilles Fit The Factory SS Silverado

PARTS LIST


1	Center Grille Insert	1	Instruction Sheet	16	Installation Clips # 71098
1	RH Grille Insert	1	Street Scene Emblem		
1	LH Grille Insert	1	Care For Grilles		

TOOL LIST

Drill Motor, Drill Bits, Grinder

1. Raise front of truck. Set on jack stands.
2. Remove the center grille. Remove the four fasteners securing the air intake bucket on each end and remove the buckets.
3. Remove the four rivets securing the OEM grilles on the air intake buckets by drilling out the rivets or by grinding off the rivet head. If grinding, do not allow the rivet to get hot or damage could occur to bucket.
4. Install the Speed Grilles as marked into their respective openings. Clip from the back side using two clips on the top side and two clips on the bottom side. Do the same on both sides. Refer to illustration for clipping procedure.
5. Install air intake buckets with the fasteners removed in step 2.
6. Install the center Speed Grille into opening. Attach to bumper cover using four clips across the top and four across the bottom. Refer to illustration for clipping procedure.

TYPICAL CLIP INSTALLATION

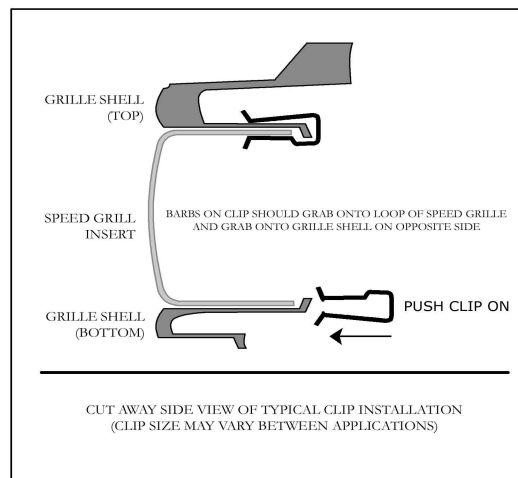

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

05/16/08 SSE 950-77144 & 950-78144