



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-76148 BLACK CHROME

950-77148 SATIN FINISH

950-78148 CHROME FINISH

2007 - 2008

CHEVY SUBURBAN / TAHOE

AVALANCHE

OEM VALANCE GRILLE

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

TOW HOOKS MUST BE REMOVED

PARTS LIST


1	RT Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098
1	LT Speed Grille Insert	1	Street Scene Emblem	1	Care For Grilles

TOOL LIST

NONE REQUIRED

1. Remove the black plastic tow hook fillers from openings by unsnapping the six retainers.
2. Install the Speed Grille insert into opening check for proper grille for opening.
3. Secure from the back side using four clips. Slide the clip over the valance edge and onto Speed Grille. Use two clips on the top side and bottom side.

TYPICAL CLIP INSTALLATION

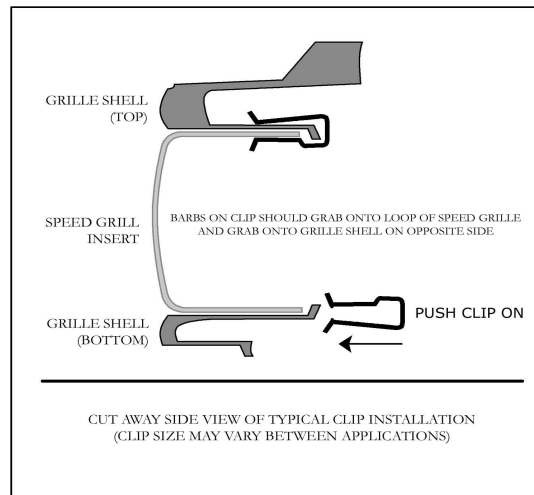

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

05/16/08 SSE 950-76148 & 950-77148 & 950-78148