



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
 Costa Mesa, Ca. 92626  
 Phone (714) 426-0590 Fax (714) 426-0591

950-76168 BLACK CHROME  
 950-77168 SATIN FINISH  
 950-78168 CHROME FINISH  
 2007  
 CHEVY TAHOE / SUBURBAN  
 AVALANCHE  
 GENERATION 2  
 BUMPER COVER  
 SPEED GRILLE INSERTS

## INSTALLATION INSTRUCTIONS


**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098
		1	Street Scene Emblem	1	Care For Grilles

TOOL LIST
NONE REQUIRED

1. The Speed Grille insert may be installed in bumper cover prior to installation of cover.
2. Install Speed Grille into opening from the front side of bumper cover.
3. Attach to bumper cover using the eight installation clips provided. Use four clips across the top and four along the bottom. " Clip " as shown below.

### TYPICAL CLIPPING INSTALLATION

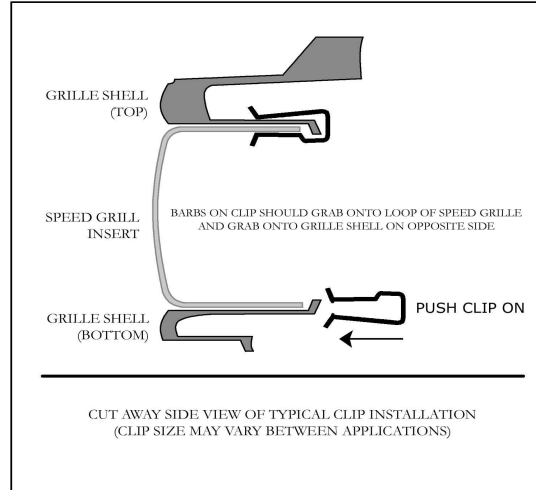

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

03/02/07 SSE 950-76168 & 950-77168 & 950-78168