



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-76178 BLACK CHROME
950-77178 SATIN FINISH
950-78178 CHROME FINISH
950-79178 STAINLESS STEEL
2007
GMC SIERRA
SPEED GRILLE INSERT

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	4	1/4" Push - In Fasteners # 18379
1	Care For Grilles	1	Street Scene Emblem	6	Installation Clips # 71092
				2	Retaining Rings # New

TOOL LIST	
1/4" Drill Bit, Drill Motor, 6 MM Socket, Ratchet, Panel Removal Tool	

1. Open hood.
2. Remove the top cover panel by removing the push in fasteners.
3. Remove the four 6 MM head screws securing the top of grille shell to vehicle.
4. Lift up slightly and pull back grille shell to release the locating tabs.
5. Pull grille shell forward to release the six metal push in fasteners. If the fasteners are stubborn to release squeeze them gently with pliers while pulling forward.
6. The bottom of the grille shell is also connected to the ABS cap on bumper. These are a bit difficult to release. Use a panel removal tool and pry the center tab up while pushing the bottom of the grille shell inward. Remove grille shell from vehicle.
7. The Speed Grille insert will install over the existing grids on grille shell.
8. Remove the GMC logo by depressing the tabs on the back side. The logo can be re-installed later. See step eleven.
9. Install the Speed Grille insert onto the grille shell. Clip the Speed Grille to the grille shell using the six clips provided. Place the clips as shown in the photo below. The large humped side of clip goes against the grille insert. Push the bottom of the Speed Grille in as you install the clips.

PHOTO 1




THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

02/28/07 SSE 950-76178 & 950-77178 & 950-78178 & 950-79178

10. Push the top side of the Speed Grille in slightly and drill four 1/4" holes as shown in the photo below. Install the push in fasteners.

PHOTO 2

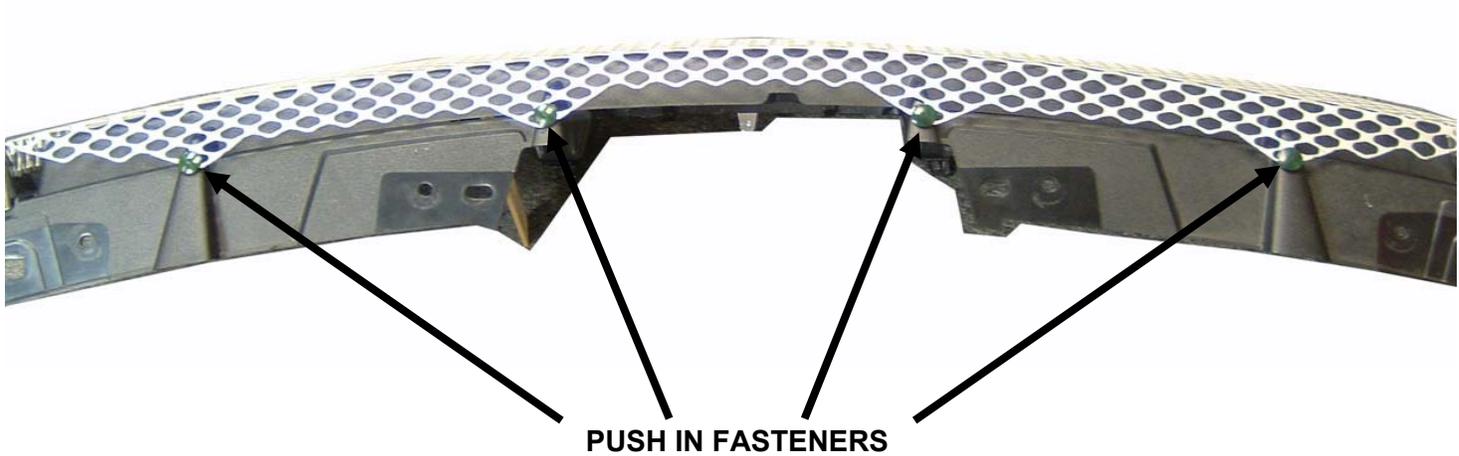

11. If you would like to re-install the GMC emblem, cut off the five flat " snap in " mounting tabs on the back side. **DO NOT** remove the two round post. Insert the emblem over the Speed Grille. Alligning the round posts with the holes in Speed Grille and the round holes in the GMC logo behind the grille. You may have to allign the holes. Fasten with the two retaining rings supplied. Use a small deep socket to push in the retainers.
12. Install grille shell back on truck, making sure it snaps into the top cap on the bumper. Allign all fasteners with slots and snap into position. Lift the top of the grille shell up so that it will install properly. Install bolts removed. Install top panel.