



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

## INSTALLATION INSTRUCTIONS

950-76179 BLACK CHROME  
950-77179 SATIN FINISH  
950-78179 CHROME FINISH  
2007  
GMC SIERRA  
OEM VALANCE GRILLE INSERT

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.


### NOTE: TOW HOOKS MUST BE REMOVED

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	4	11" Ladder Ties # 10060
1	Care For Grilles	1	Street Scene Emblem		

TOOL LIST	
Drill Motor, 3/16" Drill Bit, Side Cut Pliers	

1. Remove the tow hooks if so equipped.
2. Drill eight 3/16" holes in valance as shown in the photo below.

**PHOTO 1**

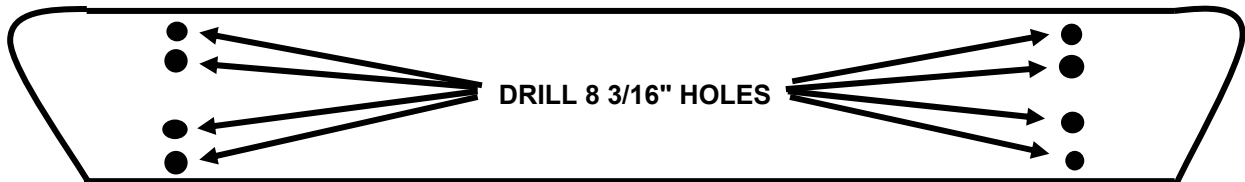

3. Attach the Speed Grille to the valance by inserting a ladder tie through the hole drilled in the back side of the valance and around the " LOOP " in the Speed Grille and then into the adjoining hole. Install all ladder ties and then pull tight cut off excess.