



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77235 SATIN FINISH

&

950-78235 CHROME FINISH

2004

GMC CANYON

SPEED GRILLE INSERT

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST


1	Speed Grille Insert	1	Instruction Sheet		
1	Care For Grilles	1	Street Scene Emblem		
8	Installation Clips # 71099 (Narrow Body)				
6	Installation Clips # 71096 (Wide Body)				

TOOL LIST

Flat Blade Screwdriver

1. Open hood and unplug the parking lamps at the top corners of grille.
2. Remove grille shell from vehicle by grasping the shell and pulling to release the fasteners. **NOTE:** there are no screws securing the grille shell.
3. Set the grille shell on a protective covered bench or table.
4. Remove the GMC logo.
5. Install the Speed Grille into the grille shell by inserting the bottom side in first, and then slightly pinching the top side while pushing it in. Make sure Speed Grille is pushed in all the way.

PHOTO A
71096 CLIPS

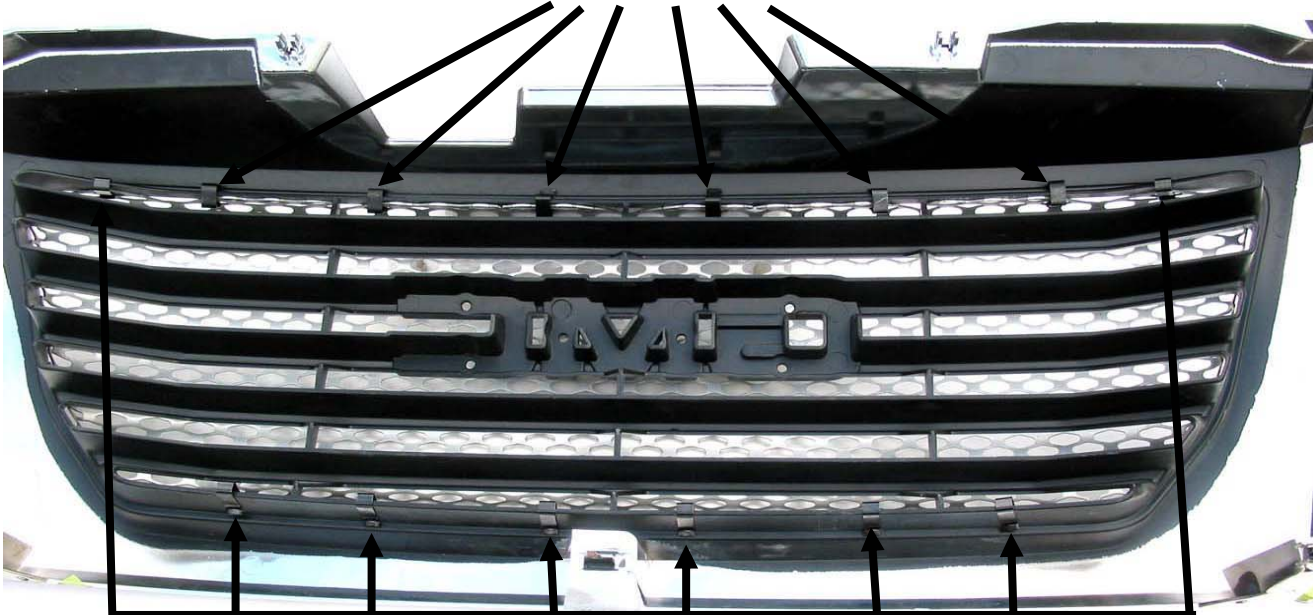


71099 CLIPS

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

6. Refer to photo A and "Clip" the Speed Grille to the grille shell at the points shown. Using a flat blade screwdriver will help by gently lifting the edge of clip when installing. DO NOT "Stretch" the clip.
7. Refer to illustration 1 when installing the 71096 clips.

ILLUSTRATION 1

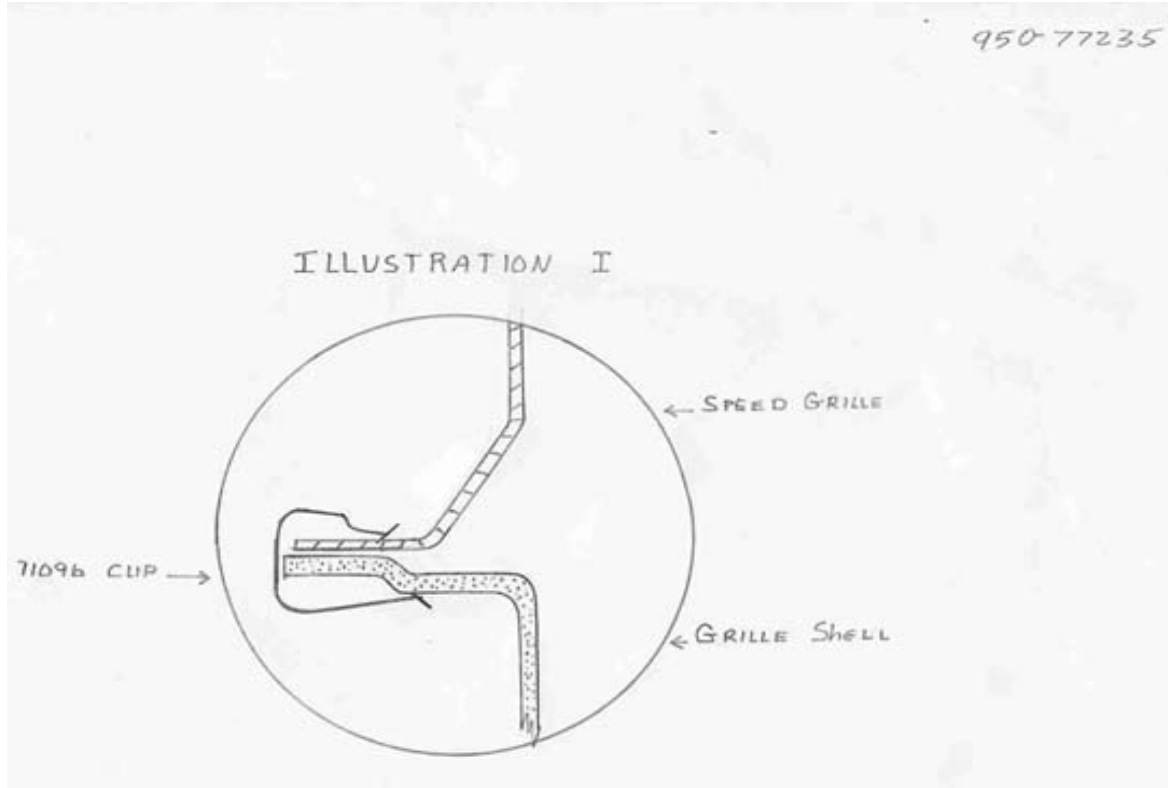

8. Install grille shell back into truck. Make sure all fasteners points are fastened NOTE: the mounting points at lower right & left of center of grille are very thin. DO NOT use excess force, or the mounting points will bend. If they do they can be straighten with minimal effort.