



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77240 SATIN FINISH
&
950-78240 CHROME FINISH
2004
CHEVY COLORADO
MAIN GRILLE INSERT

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


| PARTS LIST | | | | | |
|------------|--|---|---------------------|----|----------------------------|
| 1 | Care For Grilles | 1 | Instruction Sheet | 1 | Upper Speed Grille Insert |
| | | 1 | Street Scene Emblem | 1 | Lower Speed Grille Insert |
| 6 | Installation Clips (Wide Body) # 71096 | | | 6 | Push In Fasteners # 18379 |
| 4 | Installation Clips (Narrow) # 71093 | | | 10 | Installation Clips # 71097 |

| TOOL LIST | |
|---|--|
| Drill Motor, 1/4" Drill Bit, Flat Blade Screwdriver, Cutting Tool | |

1. Open hood and unplug the parking lamps at the top corners of grille.
2. Remove grille shell from vehicle by grasping the shell and pulling to release the fasteners. NOTE: there are no screws securing the grille shell.
3. Set the grille shell on a protective covered bench or table.
4. Remove the black ABS grille backing, cutting off at top as shown in Photo I
5. Install the lower Speed Grille insert into the lower opening. Clip as shown in illustration A, Using the 71097 clips across the top and 71093 clips across the bottom. If the 71093 clips are too tight, use the extra 71097 clips. Refer to photo I to positioning of the clips. Clips must be tight to secure grille insert.
6. Install the top Speed Grille section over the top of grille shell. See photo II . From the back side fasten the lower side using the 71096 clips (Wide Body Clip) See photo I . Clip with the long side of clip toward Speed Grille. Make sure Speed Grille is flush with outer face.
7. Fasten the top side of Speed Grille by drilling 1/4" holes through loop of grille and into top of grille shell Refer to photo II for placement of fasteners. Make sure Speed Grille is positioned correctly before drilling. Push top of Speed Grille back and mark holes. Once drilled push in the fasteners to secure Speed Grille.
8. Install grille shell back into truck. Make sure all fasteners points are fastened. NOTE: the mounting points at lower right & left of center of grille are very thin. DO NOT use excess force, or the mounting points will bend. If they do they can be straighten with minimal effort.

Thanks for choosing Street Scene as your grille source. We also have chrome and aluminum " Bow Ties " for your Colorado.

ILLUSTRATION A

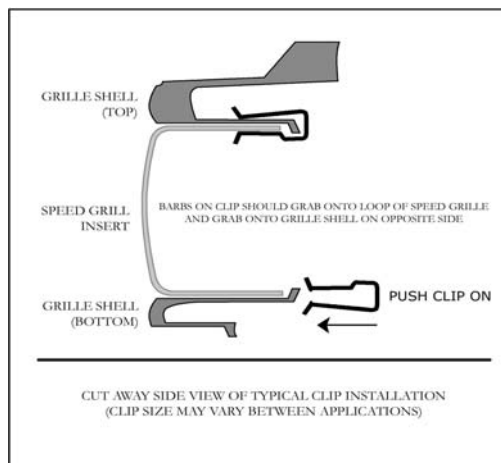

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

**TOP
PHOTO I**

71096 Clips



71097 Clips

71093 Clips

71097 Clips

PHOTO II

Push In Fasteners # 18379

