



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76325 BLACK CHROME

&

950-77325 SATIN FINISH

&

950-78325 CHROME FINISH

2003

NISSAN 350 Z


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Section	1	Instruction Sheet	14	Installation Clips # 71098
		1	Street Scene Emblem	1	Grille Care Instruction

TOOL LIST	
10 MM Socket, Ratchet, Extension	

1. Raise front of car to gain access to area behind front opening. Remove the ABS air deflector panel beneath the front end by removing the eleven 10 MM head bolts securing it.
2. Insert Speed Grille insert into opening from front side. Attach using eight clips across the top side and six clips across the bottom side. The curved side of clip goes against the grille.
3. Install the Street Scene emblem to grille face. Remove the protective cover.
4. Re-install the air deflector.

TYPICAL CLIP INSTALLATION

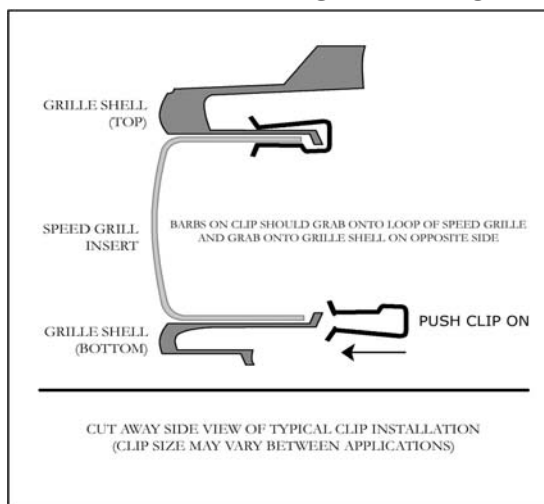

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

3/14/03 SSE 950-76325 & 950-77325 & 950-78325