



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77508 SATIN FINISH  
&  
950-78508 CHROME FINISH  
2002 - 2003  
DODGE RAM  
BUMPER SPEED GRILLE  
( WITH CHROME BUMPER )

## INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

**NOTE: WILL NOT FIT SPORT MODEL VEHICLES. USE Part # 77511 Or 78511**

**NOTE: WILL NOT WORK WITH TOW HOOKS**


### PARTS LIST

1	Speed Grille Insert	1	Instruction Sheet	14	Installation Clips # 71093
1	Got Street Scene Decal	1	Street Scene Emblem	1	Speed Grille Care

### TOOL LIST

#2 Phillips Screwdriver, Flat Blade Screwdriver

1. Remove the ABS filler in bumper if equipped by removing the four phillips screws facing upward, Carefully pry out the black housing. Save fasteners.
2. Open hood. Reach in behind bumper and unsnap the bottom side of filler piece. Re-install the fasteners to bumper. NOTE: If screws will not unscrew apply pressure to the top side of screw ( in the inside of bumper ) while unscrewing.
3. Install the Speed Grille into the opening. Clip from the back side using seven clips across the top and seven across the bottom. Refer to photo for installation.

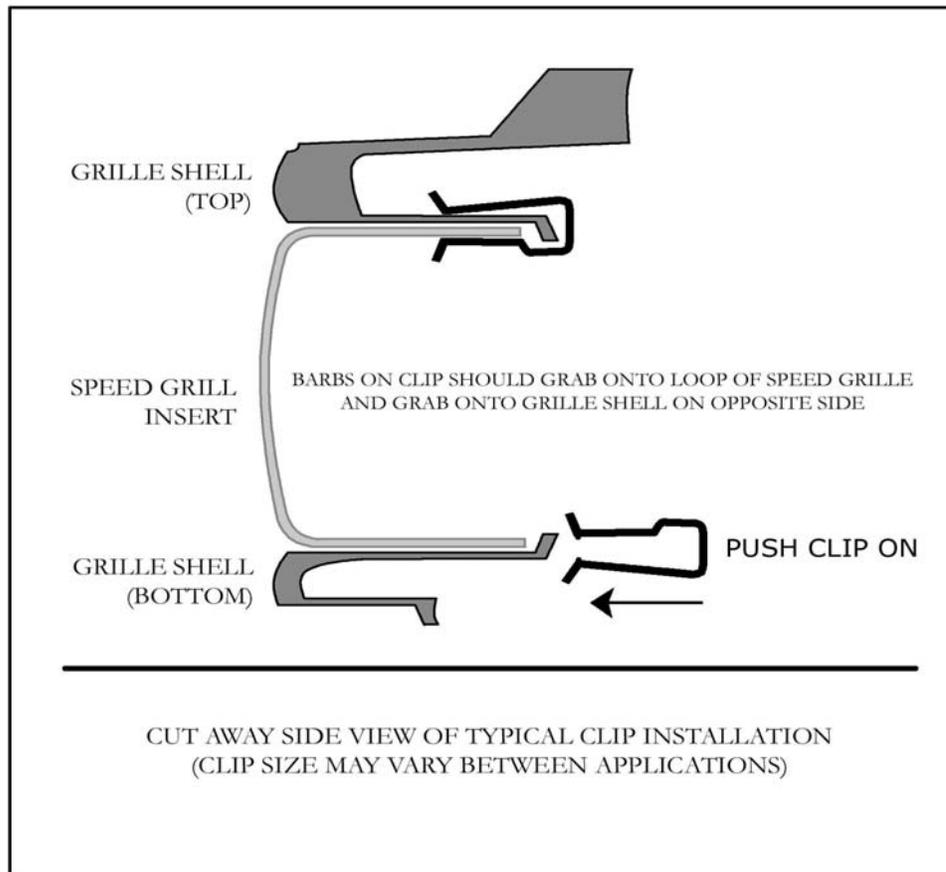

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

5/8/03 SSE 950-77508 & 950-78508