



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76513 BLACK CHROME

&

950-77513 SATIN FINISH

&

950-78513 CHROME FINISH

2006-2008

DODGE RAM

SPEED GRILLE INSERTS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST			
1	Upper RH Speed Grille Insert	32	Installation Clips # 71098
1	Upper LH Speed Grille Insert	1	Instruction Sheet
1	Lower RH Speed Grille Insert	1	Street Scene Emblem
1	Lower LH Speed Grille Insert		
1	Care For Grilles		

TOOL LIST	
Metric Socket Set, Flat Blade Screwdriver	

1. Remove the grille shell from the truck by removing the six nuts across the top of grille shell attaching it to the hood. Remove the six bolts across the bottom of grille shell attaching it to the tubular grille frame. Remove the four bolts attaching the tubular grille frame to the under side of hood.
2. Set the grille on a covered table or work bench. Remove the grille backing by depressing the eleven tabs securing each half to shell.
3. Each Speed Grille insert is marked for it's location.
4. Insert each Speed Grille into it's respective opening one at a time.
5. From the back side fasten the Speed Grille to the grille shell using the installation clips provided. Use eight clips for each grille section. Use a clip as close to each end as possible and evenly space the remaining two. Look at the photo below for installing procedure.

TYPICAL CLIP INSTALLATION

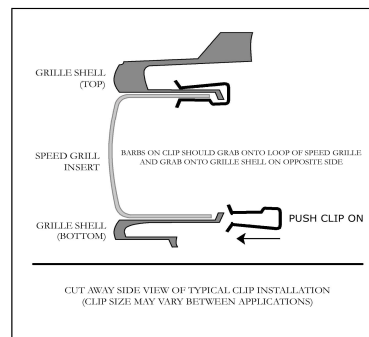

6. Install the remaining three grille sections in the same manner.
7. Install the grille shell back onto vehicle.