



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76514 BLACK CHROME
950-77514 SATIN FINISH
950-78514 CHROME FINISH
2006
DODGE RAM
OEM VALANCE INSERT

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE: WILL NOT FIT SPORT MODEL VEHICLES. USE Part # 77511 Or 78511


NOTE: WILL NOT WORK WITH TOW HOOKS

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	14	Installation Clips # 71093
		1	Street Scene Emblem	1	Speed Grille Care

TOOL LIST
#2 Phillips Screwdriver, Flat Blade Screwdriver

1. Remove the ABS filler in bumper if equipped by removing the four phillips screws facing upward, Carefully pry out the black housing. Save fasteners.
2. Open hood. Reach in behind bumper and unsnap the bottom side of filler piece. Re-install the fasteners to bumper. NOTE: If screws will not unscrew apply pressure to the top side of screw (in the inside of bumper) while unscrewing.
3. Install the Speed Grille into the opening. Clip from the back side using seven clips across the top and seven across the bottom. Refer to photo for installation.

TYPICAL CLIP INSTALLATION

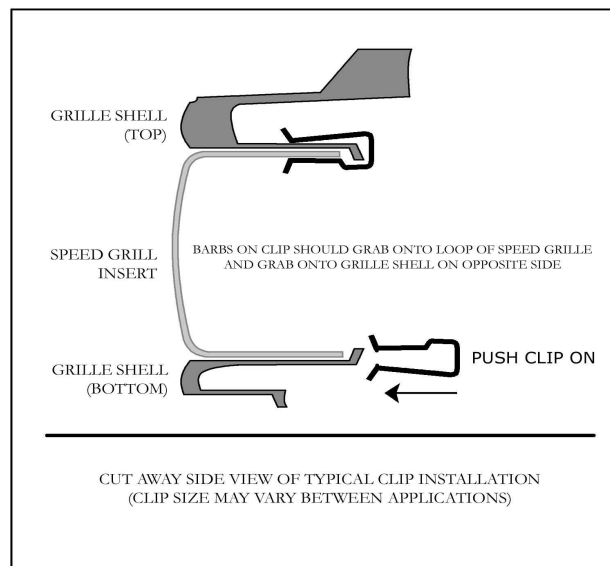

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

10/02/06 SSE 950-76514 & 950-77514 & 950-78514