



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76580 BLACK CHROME

&

950-77580 SATIN FINISH

&

950-78580 CHROME FINISH

2005

FORD SUPER DUTY

& FORD EXCURSION

CUSTOM GRILLE SHELL

W / SPEED GRILLE INSERT

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST

1	Grille Shell	1	Instruction Sheet	30	Installation Clips # 71098
1	RT Speed Grille Insert	1	Street Scene Emblem	1	Urethane Paint Instructions
1	LT Speed Grille Insert			1	Care For Grille Sheet

TOOL LIST

1. Open hood and remove the four fasteners across the top of the grille shell. Pull the bottom side to release the five mounting clips. If clips do not remain on grille shell remove them from the support panel without damaging them. Remove all clips from grille shell and save.
2. Install the clips removed from the OEM grille shell to the Street Scene Grille Shell.
3. Follow prep and paint instructions and paint grille shell to match truck.
4. Set Street Scene Grille Shell on a covered table or bench face down. Set the Speed Grille insert into the opening. Clip the Speed Grille to grille shell using the clips provided. Refer to photo for location of clips. Refer to illustration for clipping procedure.
5. Install the small side grilles into the openings from the front side. Make sure you install the L.H. grille into the driver's side of grille shell. Fasten in the same manner as the center.

TYPICAL CLIP INSTALLATION

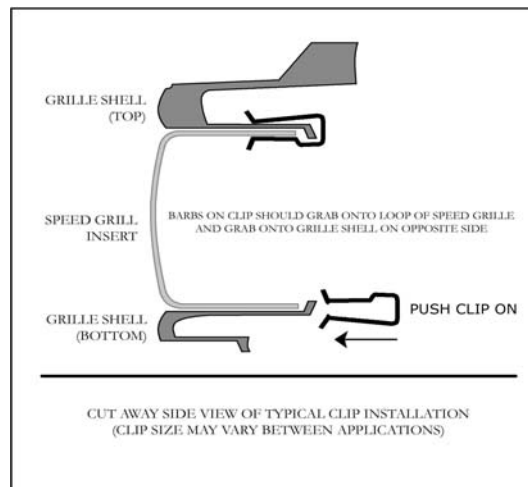


ILLUSTRATION ON OTHER SIDE

6. Install Grille Shell to vehicle by first snapping the bottom side in and then installing the fasteners removed in step one across the top. While aligning the center slot on grille shell to aligning tab on vehicle.

