



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76613 BLACK CHROME

&

950-77613 SATIN FINISH

&

950-78613 CHROME FINISH

SPEED GRILLE

VALANCE INSERT

1997 - 2000

DODGE DAKOTA W / OEM

FRONT VALANCE

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST


4	Speed Grille Sections	1	Instruction Sheet	16	Attaching Clips # 71098
		1	Street Scene Emblem		

TOOL LIST

Safety Glasses

1. Before beginning installation be sure to wear proper eye protection.
2. Remove Speed Grille sections from their packages. You will have a driver's side and a passenger side and both centers are the same.
3. Install the Speed Grille sections into their proper location of valance from the front side.
4. Attach from backside with 4 attaching clips per section. Two on top and two on the bottom.
5. Make sure the Speed Grille section are positioned properly and the barbs on the clips are locked into holes in the Speed Grille.

TYPICAL CLIP INSTALLATION

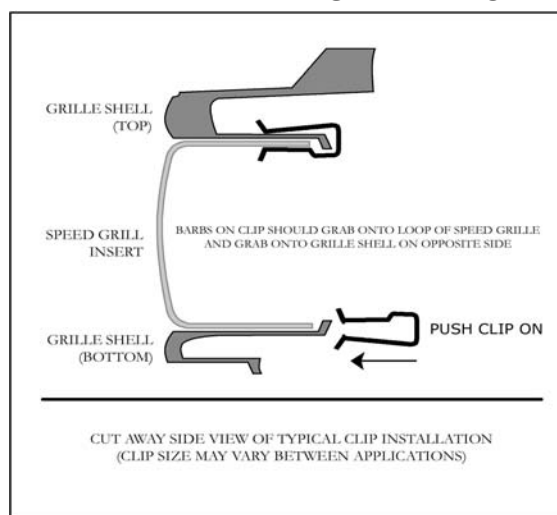

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

6/11/01 SSE 950-76613 & 950-77613 & 950-78613