



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76640 BLACK CHROME

&

950-77640 SATIN FINISH

&

950-78640 CHROME FINISH

2005

DODGE MAGNUM

MAIN GRILLE INSERTS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST


4 PC.	Speed Grille Insert	1	Instruction Sheet	22	Installation Clips # 71098
1	Care For Grille	1	Street Scene Emblem	6	Push In Fasteners # 18379

TOOL LIST

Panel Removal Tool, Flat Blade Screwdriver, # 2 Phillips Screwdriver, # 3 Square Drive Bit, Side Cut Pliers, 9/32 Socket, 10 MM Socket, Ratchet, Extension

1. Open hood and remove the two plastic header panels by lifting straight up. Remove the six top plastic push in fasteners by lifting the center and prying out using a panel removal tool.
2. Reach in and remove the two square drive plastic screws that secure the lower sides of the OEM grilles to the Styrofoam using a # 3 square drive bit.
3. Remove the ten 9/32 head screws securing the bottom of the front fascia to the lower air deflector.
4. Remove the three plastic fasteners that secure the sides of the front fascia. These fasteners must be cut to remove. Use the panel removal tool and pry the head up and cut off using side cut pliers. Replacement fasteners are included with grille kit.
5. Remove the plastic fasteners that secure the inner fender to the lower air deflector by pry up the center and then prying out the body. Save fasteners for re-assemble.
6. Pull the inner fender skirt back to expose the 10 MM head bolt securing the upper corner of the fascia to the front fender and remove. Reach in at each lower corner and unplug the parking / turn signal lamps.
7. Pull the front fascia forward to remove.
8. Set the front fascia face down on a protective covered bench or table.
9. Remove the upper and lower " grille pairs " on each side. Remove the two phillips head screws on the bottom side. Remove the metal lock tab on top side. Pull the grille pairs up at the bottom to remove, depressing the locking tabs as you go. Use a flat blade screwdriver to help.
10. Install the lower Speed Grille sections into their openings. Clip into position using the illustrations as a guide. Install the upper Speed Grille section into their openings. Clip into position Using the illustration as a guide. Refer to photo for clip placement.

TYPICAL CLIP INSTALLATION

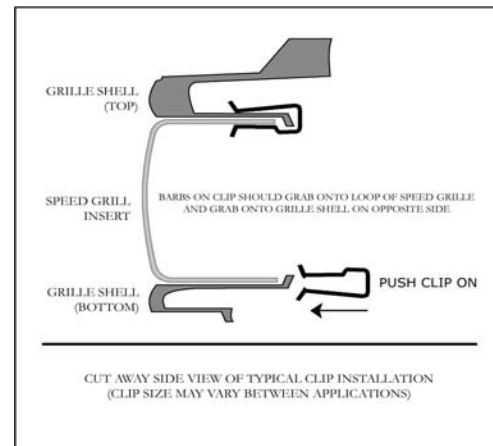

CLIP PLACEMENT



11. Install the front fascia in reverse order of removal. Make sure that the top corners of fascia slide into the " T " pins on fenders. Align fascia to fenders before tightening bolts. Use the six push in fasteners supplied in place of the plastic fasteners that were cut in step four to remove. NOTE: you will not install the two square drive plastic fasteners that were screwed into the styrofoam.