



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

950-76641 BLACK CHROME
 &
 950-77641 SATIN FINISH
 &
 950-78641 CHROME FINISH
 2005-2007
 DODGE MAGNUM
 LOWER VALANCE GRILLES

INSTALLATION INSTRUCTIONS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
2 PC	Speed Grille Inserts	1	Instruction Sheet	24	Installation Clips # 71098
1	Care For Grilles	1	Street Scene Emblem		

TOOL LIST
Ratchet, Extension, 7MM Socket

1. Raise front of vehicle for ease of installation. Remove the ten 7MM head bolts that secure the lower air deflector to the front fascia.
2. Install the Speed Grilles into the openings from the front side. The shorter of the Speed Grille will go on the bottom. **NOTE:** The curve in grilles when installing.
3. Referring to photo on right " CLIP " the Speed Grilles to the valance. Fasten each grille using twelve attaching clips. Place clips at each end top and bottom, and to the right and left of the two vertical bars top and bottom.
4. Re-attach air deflector to the front fascia using the fasteners removed in step one.

TYPICAL CLIP INSTALLATION

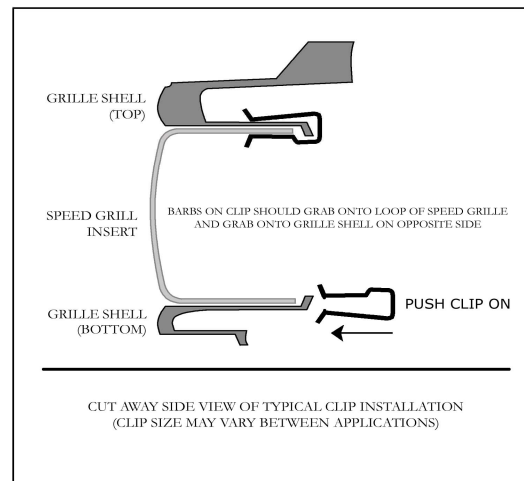

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119, D425,834, D421,585, D420,961, D420,960, D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.