



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76646 BLACK CHROME
950-77646 SATIN FINISH
950-78646 CHROME FINISH
2005 - 2007
CHRYSLER 300
OEM VALANCE
SPEED GRILLE INSERTS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Care For Grilles	1	Instruction Sheet	1	RT Upper Speed Grille Insert
		1	Street Scene Emblem	1	RT Lower Speed Grille Insert
16	Installation Clips # 71098			1	LT Upper Speed Grille Insert
				1	LT Lower Speed Grille Insert

TOOL LIST	
NO INSTALLATION TOOLS REQUIRED	

1. Raise front of vehicle to gain access to underside of front bumper.
2. Remove the black plastic grids from behind the openings at each bumper end.
3. Each Speed Grille insert is marked for it's proper location. Install each Speed Grille into the openings in the bumper cover " Clip " from the back side using four clips per Speed Grille, Two on the top and two on the bottom. Do the same on all four grille inserts. The drawing below shows proper clipping of Speed Grilles.

TYPICAL CLIPPING INSTALLATION

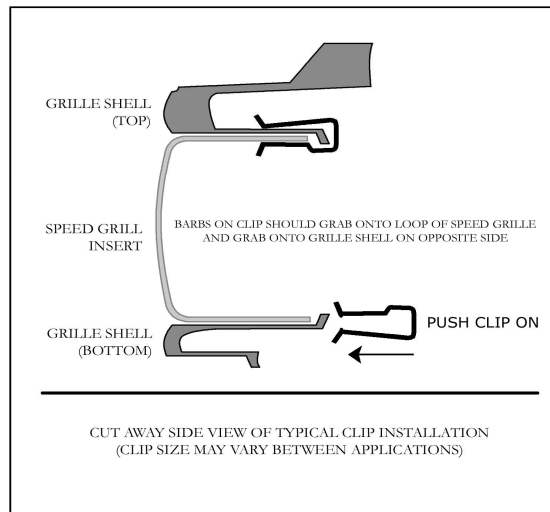

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

05/30/07 SSE 950-76646 & 950-77646 & 950-78646