



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

## INSTALLATION INSTRUCTIONS

950-76647 BLACK CHROME

&

950-78647 CHROME FINISH

2005

CHRYSLER 300

MAIN GRILLE SHELL

WITH CHROME OR BLACK

CHROME INSERT

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

### PARTS LIST


1	Grille Shell With Insert	1	Instruction Sheet
1	Drilling Template	1	Street Scene Emblem

### TOOL LIST

Drill Motor, 1/8" Drill Bit, 3/8" Drill Bit, Ratching Screwdriver, Phillips Head Bit, Square Driver Bit, Ratchet

1. Apply masking tape completely around the factory grille to protect the paint.
2. Open the hood and remove the plastic header panel cover by lifting straight up and the top plastic push fasteners. See photo 1

**PHOTO 1**

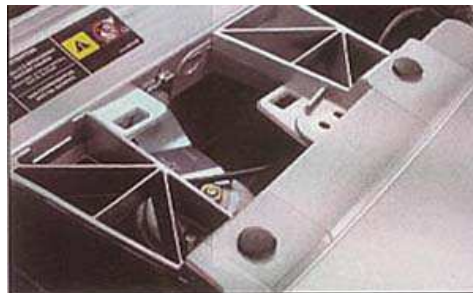

3. Remove the four factory fasteners across the top and one down each side of the grille. See Photo 2

**PHOTO 2**



4. Remove the two square drive plastic screws attaching the fascia to the foam.
5. Unclip the top and sides of the factory grille by pulling straight out.
6. Remove the lower four screws by pulling the grille out as far as you can to gain clearance for screw removal. Remove the screws from left to right. the subsequent screws will be easier to remove as you will be able to pull the grille farther out. See photo 3

**PHOTO 4**



**PHOTO 3**



7. The best way to remove the lower four (4) factory mounting screws is to use a small ratcheting screw driver as shown or a box wrench or a ratcheting box wrench and a # 2 phillips screw driver short bit. see photo # 4

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

12/29/05 SSE 950-76647 & 950-78647

**PHOTO 5**

8. For vehicles other than ones painted black or dark colors mask the grille edge 1/2" back from the front of the opening and scuff the exposed paint with a scotch brite pad. Paint the return and every thing that would be visible through the mesh grille with flat or semigloss black paint. Once the paint is dry remove the masking tape. See photo 5



9. Once paint is dry, cut out and align the supplied template for the lower mounting hole locations and tape in place. Use an awl or similar pointed tool and mark the bumper cover at three mounting hole locations. Drill through the marks made in the bumper cover with a 1/8" drill bit. See photo 6 & 7.

**Photo 6**



**Photo 7**



10. Enlarge the top and side factory grille mounting holes to 3/8".
11. Align the Street Scene Grille into the opening and press the lower mounting studs into the holes drilled in the bumper to secure the bottom edge.
12. Align the Street Scene mounting holes in the bumper cover before you align the upper mounting studs with the enlarged factory mounting holes.
13. Install the white plastic washers and lock nuts and tighten.
14. The Chrysler wing emblem may be installed to the top of the grille surround. This can be purchased from your local Chrysler dealer. The wing emblem is used on the truck.