



# STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue  
 Costa Mesa, CA. 92626  
 Phone (714) 426-0590 Fax (714) 426-0591

## INSTALLATION INSTRUCTIONS

950-77705 SATIN FINISH  
 &  
 950-78705 CHROME FINISH  
 SPEED GRILLE  
 BUMPER INSERT  
 1997 - 1998  
 F-150 & LIGHT DUTY  
 F-250 2 WD

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation. Installation time is approximately 30 minutes.

**Note: No Drilling Is Required**


PARTS LIST					
1	Speed Grille Section	1	Instruction Sheet	8	Attaching Clips # 71093
		1	Street Scene Emblem	1	Got Street Scene Decal

TOOL LIST
Safety Glasses, Flat Blade Screwdriver, Gloves, Snap Ring Pliers ( Helpful But Not Necessary ) Masking Tape

1. Before beginning installation be sure to wear proper eye protection.
2. Remove air deflector between bumper and frame cross member by prying out the seven plastic retaining clips. Save clips for reassemble.
3. Center Speed Grille insert in bumper opening from front side and tape into place.
4. From backside of bumper install the 8 attaching clips. One at each end, top and bottom, and the four remaining equally spaced, top and bottom.

**NOTE:** Due to the extreme high holding power of the spring steel clips, difficulty may be encountered when installing. TIP: Use snap ring pliers to gently open the clip to ease installation. CAUTION: Do not over open clip as this may cause it to break.

5. Make sure barbs on clips are grabbing the inside of the hole on the grille insert.
6. Re-install air deflector. **NOTE:** This is a necessary part for the engine cooling. Do not forget to install.

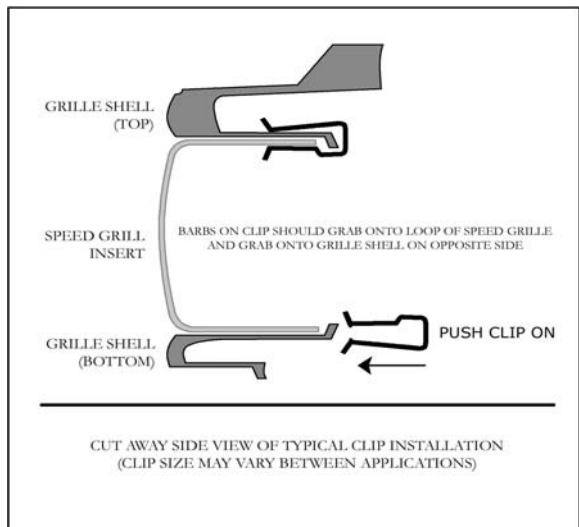

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119, D425,834, D421,585, D420,961, D420,960, D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.