



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, CA. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

950-77725 SATIN FINISH
 &
 950-78725 CHROME FINISH
 SPEED GRILLE
 1999-2002 FORD
 EXPED / F-150 W / OEM
 FRONT VALANCE

INSTALLATION INSTRUCTIONS

NOTE :


Valance insert for 1999 Ford EXPED / F-150 W / OEM front valance W / Or W / O fog lamps & tow hooks
 (will not fit Base Model F-150) ALSO : No drilling Required.

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

| PARTS LIST | | | | | |
|------------|-----------------------|---|---------------------|----|-------------------------|
| 4 | Speed Grille Sections | 1 | Instruction Sheet | 16 | Attaching Clips # 71098 |
| | | 1 | Street Scene Emblem | 1 | Got Street Scene Decal |

| TOOL LIST | |
|----------------|--|
| Safety glasses | |

1. Before beginning installation be sure to wear proper eye protection.
2. Remove Speed Grille sections from their packages. Each Speed Grille section is labeled for it's location and top side.
3. Install the Speed Grille sections into their location of valance from the front side.
4. Attach from backside with 4 attaching clips per section. Two on top and two on the bottom.
5. Make sure Speed Grille sections are positioned properly and that the barbs on the clips are locked into the holes in the Speed Grille.

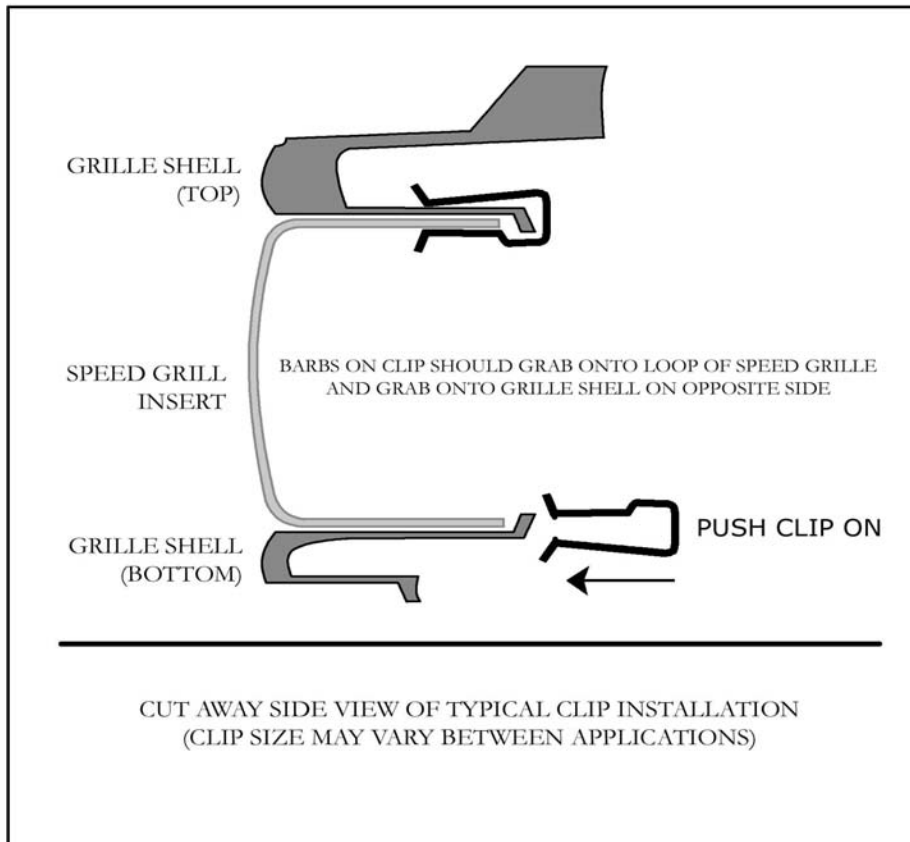

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.