



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, CA. 92626
Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77728 SATIN FINISH
&
950-78728 CHROME FINISH
SPEED GRILLE
1999 - 2000
FORD LIGHTING
FOR
OEM BUMPER COVER GRILLE

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.


Note: No Drilling Is Required

PARTS LIST					
1	Speed Grille Section	1	Instruction Sheet	12	Attaching Clips # 71099
		1	Street Scene Emblem	1	Got Street Scene Decal

TOOL LIST	
Safety Glasses, 7mm Socket, Ratchet, Or Phillips Head Screwdriver	

NOTE: Matching top grille is SS part number 950-77718, For ease of installation we recommend raising front of vehicle.

- 1 . Undo the splash apron from bottom side of bumper cover.
- 2 . Remove the nine 7 mm head / phillips head screws attaching the OEM grille to the bumper cover.
- 3 . Install the Speed Grille insert into the opening from the front side of vehicle.
- 4 . Attach from the back side using six clips on the top side and six clips on the bottom side with the flat side facing away from Speed Grille.
- 5 . Re-attach splash shield to bumper cover.

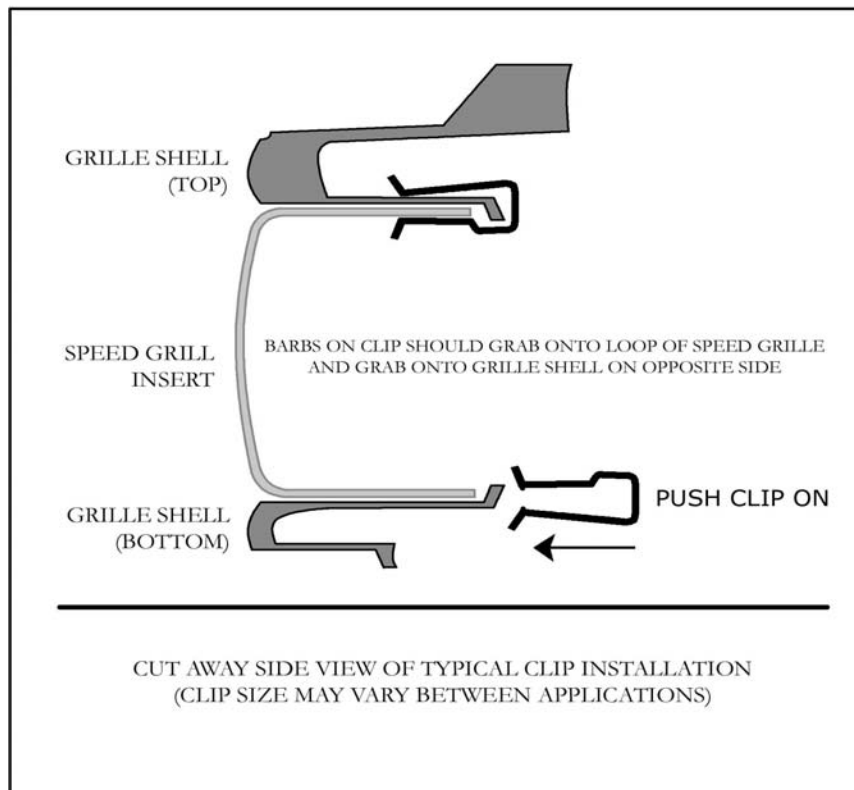

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

6/11/01 SSE 950-77728 & 950-78728