



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77729 SATIN FINISH

&

950-78729 CHROME FINISH

2001 - 2002

FORD LIGHTNING

OEM BUMPER COVER GRILLE

### INSTALLATION INSTRUCTIONS

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.


#### PARTS LIST

1	Speed Grille Section	1	Instruction Sheet	12	Installation Clips # 71099
1	Got Street Scene Decal	1	Street Scene Emblem	1	Speed Grille Care Sheet

#### TOOL LIST

7 MM Socket, Ratchet Or Phillips Head Screwdriver

1. Remove the splash apron from the bottom side of bumper cover.
2. Remove the nine 7mm head / phillips head screws attaching the OEM grille to the bumper cover.
3. Install the Speed Grille insert into the opening from the front side of vehicle.
4. Attach from back side using six clips on the top side and six clips on the bottom side with the flat side facing away from Speed Grille.
5. Re-attach splash shield to bumper cover.
6. Install the Street Scene Emblem to the grille face. Remove the protective cover.

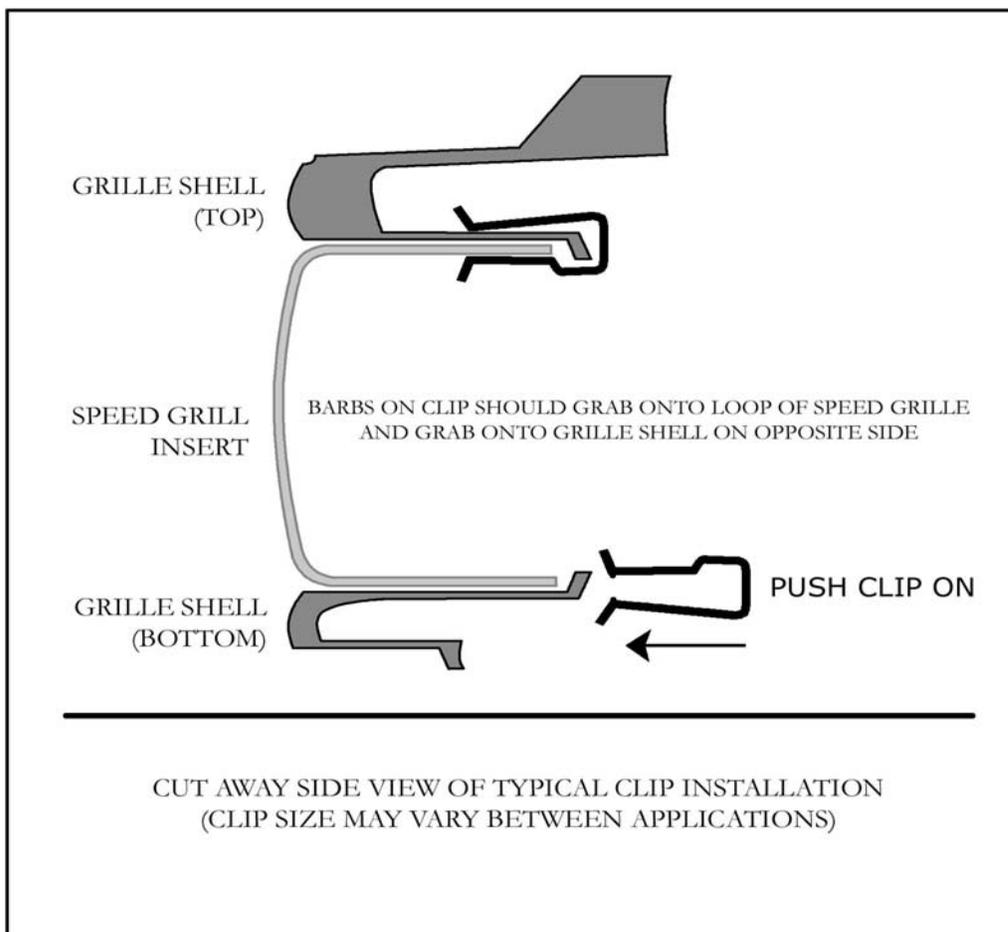

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

5/24/02 SSE 950-77729 & 950-78729