



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76754 BLACK CHROME
&
950-77754 SATIN FINISH
&
950-78754 CHROME FINISH
2006
FORD FUSION 4 CYL
REAR VALANCE FASCIA LIP
INSERT FOR S/S REAR VALANCE

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE:

INSTALL SPEED GRILLE PRIOR TO INSTALLING REAR FASCIA / VALANCE


PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	1	Care For Grilles
6	11" Ladder Ties	1	Street Scene Emblem		

TOOL LIST
Drill Motor, 5/32 Drill Bit, Side Cut Pliers


1. Refer to the photo below and drill twelve 5/32" holes in rear valance as shown. Take your time to drill holes in correct spots. It is highly recommended to drill holes prior to painting.

PHOTO

TOP LIP

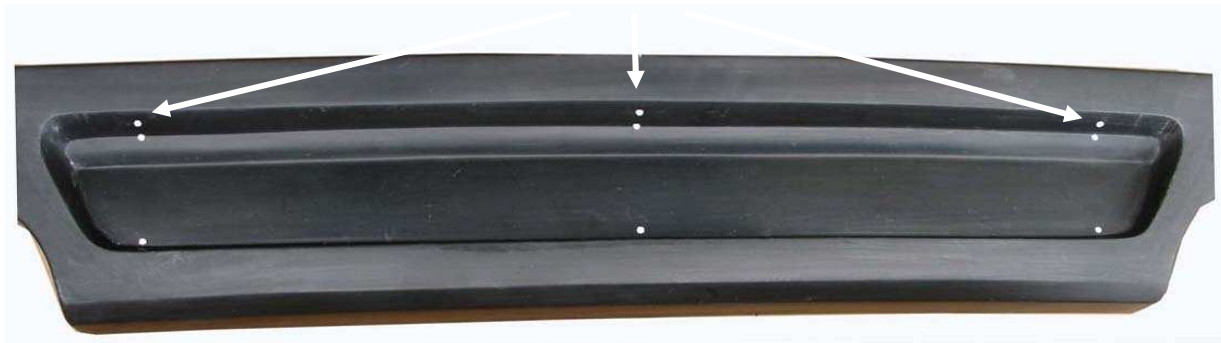

BOTTOM LIP

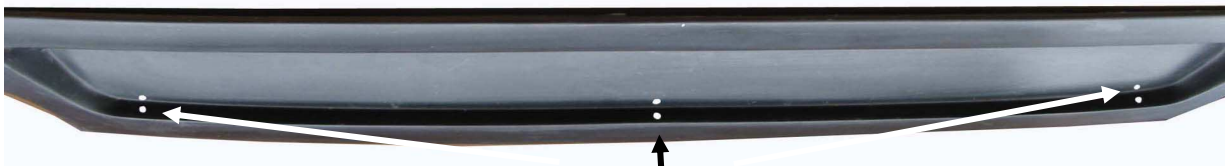

2. To further enhance the look, the recessed area in the valance should be painted satin or flat black.
3. From the back side insert the ladder ties thru on of each of the six groups of holes. Set the Speed Grille into recess and insert the ladder tie thru " Loop " in Speed Grille and into empty hole above the ladder tie. DO NOT pull tight until all six ties are used. When pulling tight pull each tie a little at a time until all are tight. Cut off excess.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

05/09/06 SSE 950-76754 & 950-77754 & 950-78754