



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76767 BLACK CHROME
950-77767 SATIN FINISH
950-78767 CHROME FINISH
2008
FORD SUPER DUTY
BUMPER SPEED GRILLE


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	2	Clear Strips # 77765C
1	Care For Grilles	1	Street Scene Emblem	8	Installation Clips # 71098

TOOL LIST	
NONE REQUIRED	

1. The Speed Grille will install into the opening in the front bumper.
2. Before you install the Speed Grille install the two clear strips onto the edge of the front bumper so that it wraps over the chrome 90 degrees edge. (This will keep the Speed Grille from sliding around when installing the retaining clips.
3. After installing the clear strips on the top and bottom of the opening, insert the Speed Grille onto the opening. From the back side install the installation clips over the return edge of Speed Grille and around the bumper. See illustration below. Use four clips on the top and four on the bottom.

TYPICAL CLIP INSTALLATION

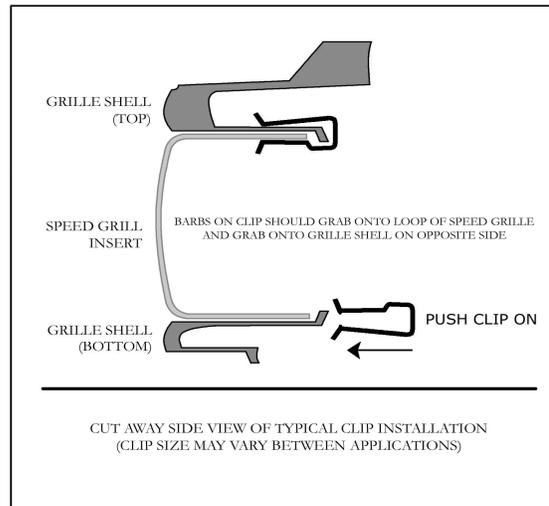

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

12/17/07 SSE 950-76767 & 950-77767 & 950-78767