

STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue Costa Mesa, Ca. 92626 Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76779 BLACK CHROME 950-77779 SATIN FINISH 950-78779 CHROME FINISH 2009 FORD F-150 OEM LOWER VALANCE GRILLE


VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST						
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098	
1	Care For Grilles	1	Street Scene Emblem			
2 PCS	Clear Adhesive Backed Strip # (77765C)					

TOOL LIST	
NO TOOLS REQUIRED	

- 1. Open hood.
 - Wipe off the top and bottom chrome edge on bumper where the grille will be installed. Clean the back side also.
- 2. Cut the two clear strips to length of opening. Peel the backing off and apply to the edge of bumper and wrap the excess around the back side.
- 3. Install the grille into opening. From the back side install the clips as shown below.



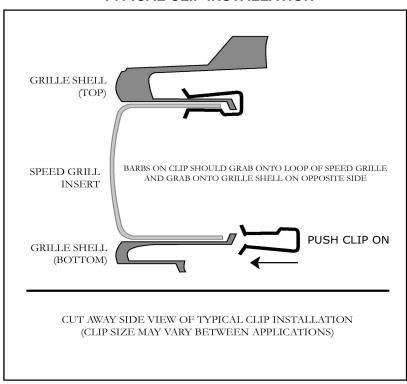

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420, 961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.