



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

### INSTALLATION INSTRUCTIONS

950-76780 BLACK CHROME

950-77780 SATIN FINISH

950-78780 CHROME FINISH

2009

FORD FLEX

MAIN GRILLE INSERT

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

#### NOTE

We highly recommend installing the lower Speed Grilles PN 950-7X781 at the same time as installing the main Speed Grille insert. Removal of the front fascia is necessary when installing the Speed Grille inserts.

#### PARTS LIST


1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098
1	Care For Grilles	1	Street Scene Emblem	2	1/4" Push In Fasteners

#### TOOL LIST

Drill Motor, 1/4" Drill Bit, 5 MM Socket, Phillips Screwdriver, Flat Blade Screwdriver, Door Panel Removal Tool

1. Remove the front fascia by turning the front wheels left to right and removing the fasteners in the wheel housings, securing the fascia. Just above the license plate bucket are located two plastic retaining fasteners. Remove these and save for re-use. Raise the front of vehicle to gain access to the underside. Remove the hex headed screws that secure the fascia to the vehicle. Remove the fasteners across the top side of fascia. Gently pull the fascia at each wheel well opening to un-snap the fascia beneath the head lamps. With aid of another person remove the fascia.
2. Remove the " FORD " emblem from the fascia by removing the two nuts on the back side.
3. Install the Speed Grille over the grids of the grille portion of the fascia making sure that the bottom lies over the bottom edge.
4. From the back side " clip " the bottom side of the Speed Grille. Use a clip as close to each end as you can and evenly space the remaining clips.
5. If you would like to retain the " FORD " emblem slip it through the holes in Speed Grille and into the fascia. Secure with nuts removed in step 2.  
DO NOT SECURE TOP side of Speed Grille at this time.

#### TYPICAL CLIP INSTALLATION

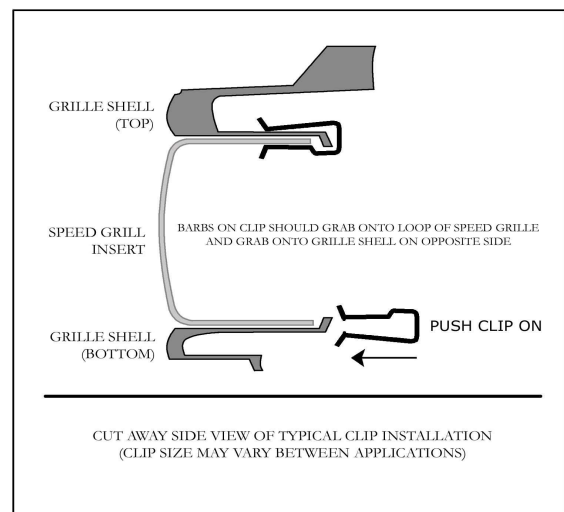

6. Install fascia back on vehicle at this time. Install all fasteners on the bottom and sides.
7. On the top side, push the Speed Grille back and install two of the fasteners removed through the loops in Speed Grille.
8. On the right and left angled top sides of Speed Grille while pushing it against the OEM grille, drill a 1/4" hole through the loop of Speed Grille and into the OEM grille and install the black push in fasteners.-

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

01/22/09 SSE 950-76780 & 950-77780 & 950-78780