

STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue Costa Mesa, Ca. 92626 Phone (714) 426-0590 Fax (714) 426-0591 950-76833 BLACK CHROME
&
950-77833 SATIN FINISH
&
950-78833 CHROME FINISH
2006
FORD F-150
SSE BUMPER COVER
GRILLE INSERT

INSTALLATION INSTRUCTIONS

VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.


NOTE: THIS SPEED GRILLE FITS THE P.N. 950-70833 BUMPER COVER ONLY

PARTS LIST						
1	Speed Grille Insert	1	Instruction Sheet	8	Installation Clips # 71098	
		1	Street Scene Emblem	1	Care For Grilles	

TOOL LIST	

- 1. Install Speed Grille before installing bumper cover on truck.
- 2. Set the Speed Grille into the opening in the bumper cover. Fasten from the back side using the clips provided. Use four of the clips across the top side and four across the bottom side.

TYPICAL CLIPPING INSTALLATION

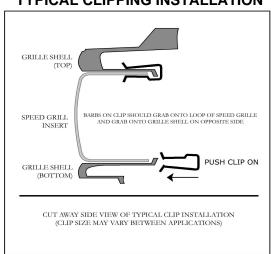

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420, 961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.