



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76836 BLACK CHROME

950-77836 SATIN FINISH

950-78836 CHROME FINISH

SPEED GRILLE INSERT

2007

FORD EXPEDITION WITH

SSE FRONT FASCIA

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST


1	Speed Grille Insert	1	Instruction Sheet	4	Installation Clips # 71098
		1	Street Scene Emblem	4	Installation Clips # 71099
				4	1/4" Push In Fasteners # 18379

TOOL LIST

Door Panel Removal Tool

1. Remove the four "push in" fasteners that attach the rubber apron to the round crossmember to gain access to the back side of fascia.
2. Install the Speed Grille into the opening from the front side.
3. Clip the top side to the fascia using the 71098 clips (Shorter Clips). Clip the bottom side to the fascia using the 71099 clips (Longer Clips). See illustration below.

TYPICAL CLIP INSTALLATION

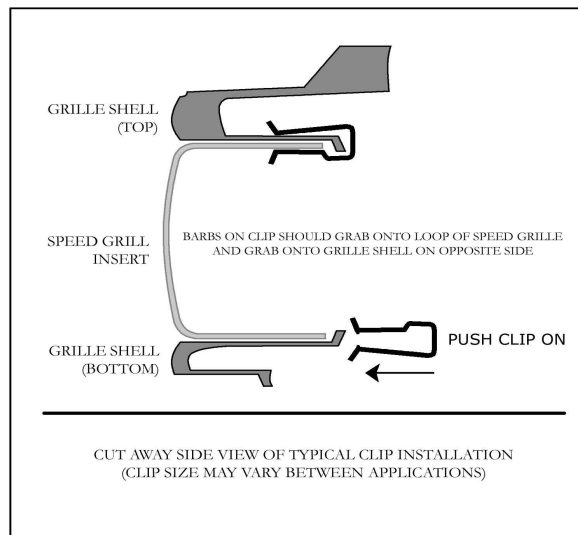

4. Re-attach the rubber apron using the new push in fasteners supplied.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

10/11/06 SSE 950-76836 & 950-77836 & 950-78836