



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-76838 BLACK CHROME

950-77838 SATIN FINISH

950-78838 CHROME FINISH

2006 - 2007

FORD F-150

SSE BUMPER COVER

SPEED GRILLE INSERT

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE: SPEED GRILLE INSERT FITS STREET SCENE BUMPER COVER

***** P.N. 950-70834 ONLY *****

PARTS LIST

1	Speed Grille Insert	1	Instruction Sheet	10	Installation Clips # 71098
1	Care For Grilles	1	Street Scene Emblem		

TOOL LIST


NO TOOLS NEEDED

NOTE:

WE HIGHLY RECOMMEND INSTALLING THE SPEED GRILLE INTO THE BUMPER COVER BEFORE INSTALLING THE BUMPER COVER ON VEHICLE

1. Insert the Speed Grille insert into the opening in bumper cover.
2. Attach from the back side using the ten clips provided. Use five on the top side and five on the bottom side. Install a clip in center, at each end and centered between the two. The drawing below shows the correct way of installing the attaching clips.

TYPICAL CLIP INSTALLATION

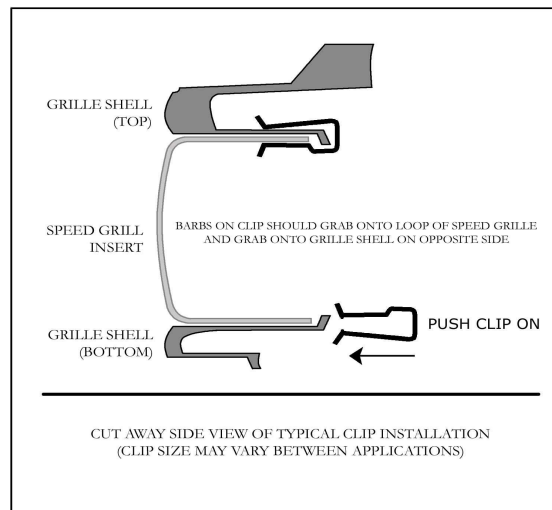

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

06/15/07 950-76838 & 950-77838 & 950-78838