



## STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

### INSTALLATION INSTRUCTIONS

950-76839 BLACK CHROME

950-77839 SATIN FINISH

950-78839 CHROME FINISH

2008

FORD SUPER DUTY

SSE BUMPER COVER

SPEED GRILLE INSERT

GENERATION 1

**VERY IMPORTANT !** Read and understand all directions and check the following parts list before starting installation.

#### PARTS LIST

1	Speed Grille Insert	1	Instruction Sheet	4	Push In Fasteners # 18379
1	Care For Grilles	1	Street Scene Emblem	4	Installation Clips # 71097

#### TOOL LIST


1/4" Drill Bit, Drill Motor, Flat Blade Screwdriver

#### NOTE:

**INSTALL SPEED GRILLE INSERT ON BUMPER COVER BEFORE INSTALLING BUMPER COVER**

1. Install the Speed Grille insert to bumper cover with the short angled side facing up.
2. Attach to bumper cover using the clips provided, see drawing below.

#### TYPICAL CLIPPING INSTALLATION

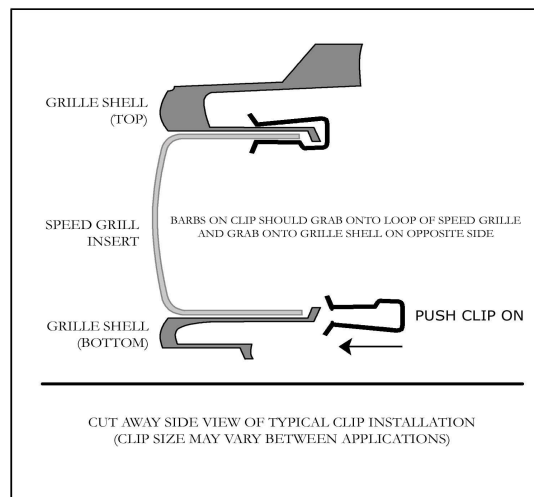

3. Attach the bottom side using the push in fasteners. Drill a 1/4" hole and push in to retain.

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

07/09/08 SSE 950-76839 & 950-77839 & 950-78839