



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-76847 BLACK CHROME

950-77847 SATIN FINISH

950-78847 CHROME FINISH

2009

FORD F-150

SSE BUMPER COVER

SPEED GRILLE INSERT

INSTALLATION INSTRUCTIONS

NOTE: This grille **MUST** be installed prior to installing bumper cover. Drill all holes prior to painting bumper cover.

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST

1	Speed Grille Insert	1	Instruction Sheet	8	Push In Fasteners # 18379
1	Care For Grilles	1	Street Scene Emblem	4	11" Cable Ties

TOOL LIST

Drill Motor, 5/32" & 1/4" Drill Bits, Side Cut Pliers

1. Set the SSE Bumper Cover on a bench or table. Set the Speed Grille into the opening and center. There should be about 1/4" at each end.
2. Fasten the Speed Grille to Bumper Cover by drilling four 1/4" holes through the holes in Speed Grille and into the bumper cover on the top and bottom sides making sure the Speed Grille is push back into the opening so that the face is flush with face of bumper cover. See Photo below.




TOP SIDE



BOTTOM SIDE

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

3. Fasten Speed Grille to bumper cover using the " Push In " fasteners supplied.

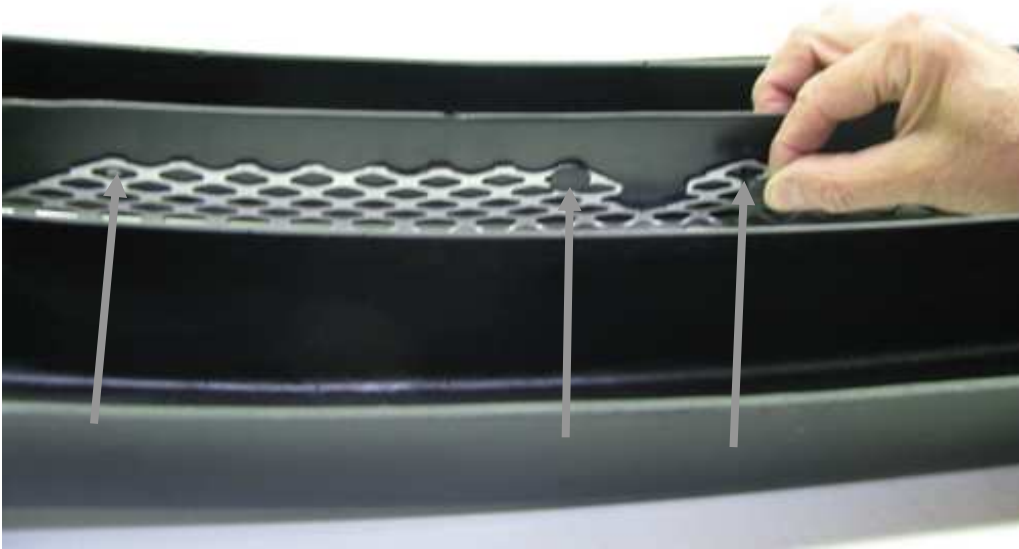

4. Drill four 5/32" holes at each end of bumper cover as shown below.



5. Secure Speed Grille to bumper cover using the cable ties provided. Snug up cable ties slowly before pulling tight. Cut off excess tie.

