



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
 Costa Mesa, Ca. 92626
 Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS


950-77103 SATIN FINISH
 &
 950-78103 CHROME FINISH
 URETHANE VALANCE
 SPEED GRILLE
 88 - 98 CHEVY
 &
 GMC CK TRUCK

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Section	1	Instruction Sheet	4	Attaching Clips # 71098
4	1/4" Flat Washers	1	Street Scene Emblem	2	1/4"- 20 X 1" Bolts
		2	1/4 - 20 Lock Nuts	1	Got Street Scene Decal

TOOL LIST
1/4" Drive Ratchet, 7/16" Socket, 7/16" Wrench, Safety Glasses
Note: Install SSE 950-70103 valance FIRST before installing the SSE "Speed Grille"

1. Before beginning installation be sure to wear proper eye protection.
2. Remove the two bolts attaching the SSE valance to the bumper at each end of the insert opening. Leave the center bolt in.
3. Remove the "Speed Grille" from it's package.
4. Looking at the inside of the "Speed Grille", you will see the grille marked at two locations.
5. Slide the grille into the opening with the marked (short side) facing up.
6. Attach the "Speed Grille" with the two 1/4" fasteners provided. Use a washer between the bolt and grille, and a washer and lock nut at the bumper underside.
7. Tighten securely
8. Attach the lower side of the "Speed Grille" with the four clips provided.

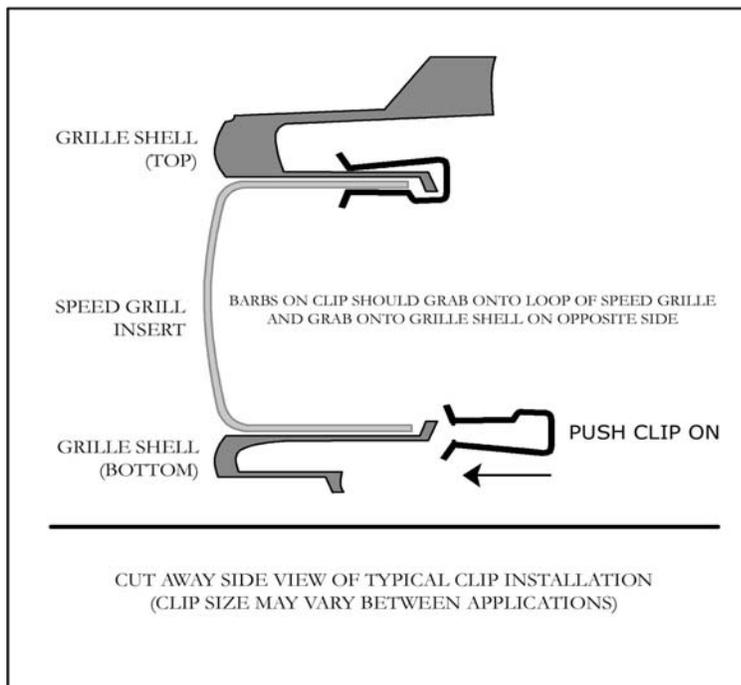

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.