



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

950-77112 SATIN FINISH
950-78112 CHROME FINISH
2007 - 2008
CHEVY SILVERADO HD
SSE GEN 1
BUMPER COVER
SPEED GRILLE INSERTS

INSTALLATION INSTRUCTIONS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	Speed Grille Insert Top	1	Instruction Sheet	15	Installation Clips # 71098
1	Speed Grille Insert RT	1	Street Scene Emblem	9	Installation Clips # 71099
1	Speed Grille Insert LT	1	Care For Grilles		
1	Speed Grille Insert C Bottom			4	Push In Fasteners 1/4" # 18379

TOOL LIST	
Drill Motor, 1/4" Drill Bit, Flat Blade Screwdriver	

1. The Speed Grille insert may be installed in bumper cover prior to installation of cover.
2. Install lower center Speed Grille into opening from the front side of bumper cover.
3. Attach to bumper cover using the thirteen installation clips provided. Use four of the small clips across the top also use 3 of the longer clips along the top. Use 6 of the longer clips on the bottom. See photo below.

PHOTO 1

Installation Clips # 71098 3/4" Long




Installation Clips # 71099 1 1/8 Long

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

06/26/08 SSE 950-77112 & 950-78112

TYPICAL CLIPPING INSTALLATION

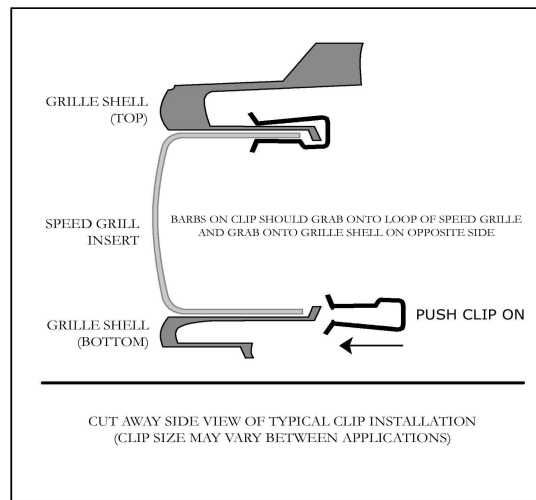

4. Install the top Speed Grille insert into the opening with the wider side facing down. Attach to the bumper cover in the same manner using four 3/4" clips on the bottom side and three 3/4" clips on the top side.
5. Install the side Speed Grille Inserts from the front side. Attach using 2 of the 3/4" long clips and 2 of the push in fasteners. Install the top part of the insert first using the two clips. See Photos 1 & 2 below. Then push the bottom in until it looks even then mark and drill two holes for the push in fasteners to hold the bottom in place.

PHOTO 1



Installation Clips 3/4" Long

PHOTO 2



Push In Fasteners