



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77124 SATIN FINISH
950-78124 CHROME FINISH
2006
CHEVY TRAILBLAZER
SS LOWER VALANCE
SPEED GRILLE INSERTS


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
3 PC SET	Speed Grille Inserts	1	Instruction Sheet	16	Installation Clips # 71098
		1	Street Scene Emblem	1	Care For Grilles

TOOL LIST	
Flat Blade Screwdriver	

1. Remove the three black ABS grilles from the bumper cover. Pry up the tabs with a flat blade screwdriver to remove.
2. Insert the side Speed Grilles into the chrome air vent openings. Clip from the back side using two of the clips on the top and two on the bottom.
3. Insert the center Speed Grille into the opening fasten by clipping in the same manner. Use four clips across the top and four across the bottom.

TYPICAL CLIPPING INSTALLATION

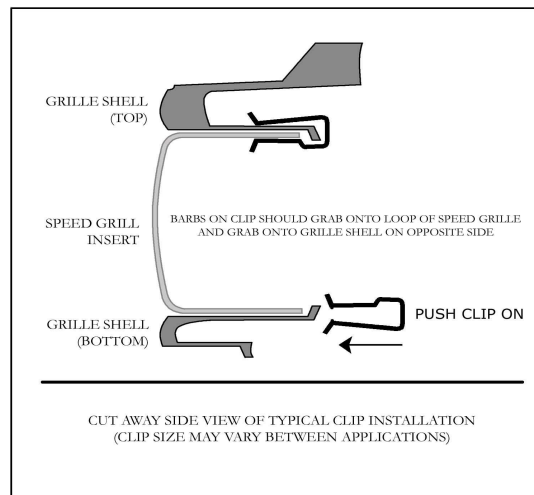

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

03/05/07 SSE 950-77124 & 950-78124