

STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue Costa Mesa, Ca. 92626 Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS


950-77142 SATIN FINISH
&
950-78142 CHROME FINISH
2005
CHEVY EQUINOX
MAIN GRILLE INSERTS

VERY IMPORTANT! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST						
1	Upper Grille Insert	1	Instruction Sheet	4	Push In Fasteners (1/4") # 18379	
1	Lower Grille Insert	1	Street Scene Emblem	1	Care For Grilles	
12	11" Ladder Ties					


TOOL LIST	
Drill Motor, 3/16" Drill Bit, 1/4" Drill Bit, Side Cut Pliers	


1. The Speed Grilles lay over the X grids on the factory grille. The Upper Speed Grille section will lay over the top edge of grille shell and is retained by the four push in fasteners supplied. Refer to photo 1 for placement of fasteners.

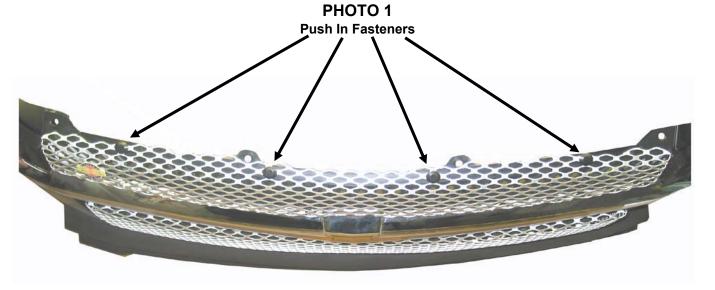

2. Drill a 1/4" hole through the "LOOP" in Speed Grille and into grille shell. Push the retainers through to fasten. The bottom side of Speed Grille is fastened using four of the ladder ties provided. Run the ladder tie around the loop in Speed Grille and around the X member. Refer to photo 2 for reference.



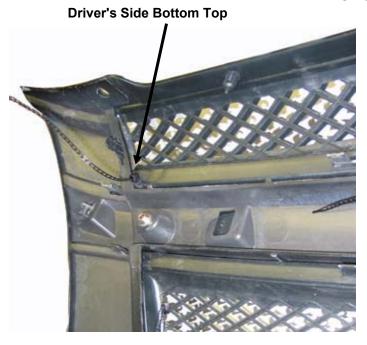


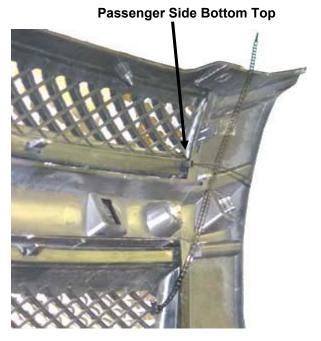

3. It will be necessary to drill two 3/16" holes to the right and left of bow tie to run the ladder tie through. Refer to photo 3 for placement of ties.


PHOTO 3

Drill Holes 3/16" For Ladder Ties

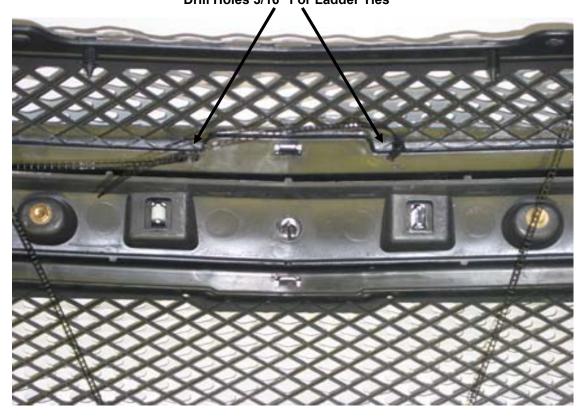


4. The lower Speed Grille is attached using the ladder ties in the same manner. It will also be necessary to drill two holes to the right and left of bow tie. See photo 4

PHOTO 4
Drill Two 3/16" Holes For The Ladders Ties

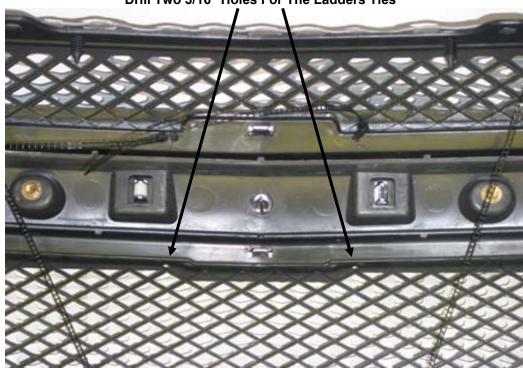

5. Install the ladder ties as shown in photo 5. Install ties so that they are where they can not be seen.

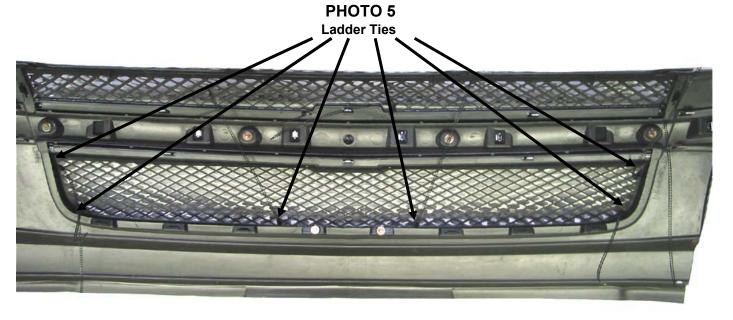

6. Cut off all excess ties.