



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77143 SATIN FINISH

&

950-78143 CHROME FINISH

CHEVY SILVERADO / GMC

& SIERRA

SSE VALANCE GRILLE

3 PC. SET

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

NOTE:

FITS STREET SCENE BUMPER COVER'S PART NUMBER'S 70143, 70144, 70165

PARTS LIST

3 PC	Speed Grille Set	1	Instruction Sheet	10	Installation Clips # 71099
1	Street Scene Decal	1	Street Scene Emblem	8	Installation Clips # 71098
				1	Care For Grilles

TOOL LIST


NO TOOLS REQUIRED

NOTE:

We highly recommend installing Speed Grilles into valance before installing valance on vehicle.

1. Install Speed Grille inserts into their respective openings. From the backside, clip the side grilles using FOUR of the 71098 clips 3/4" long. Refer to illustration. Install the center Speed Grille into opening "clip" in the same manner using FIVE 71099 1" long clips on the top side and FIVE 71099 1" long clips on the bottom side.

Typical Clip Installation

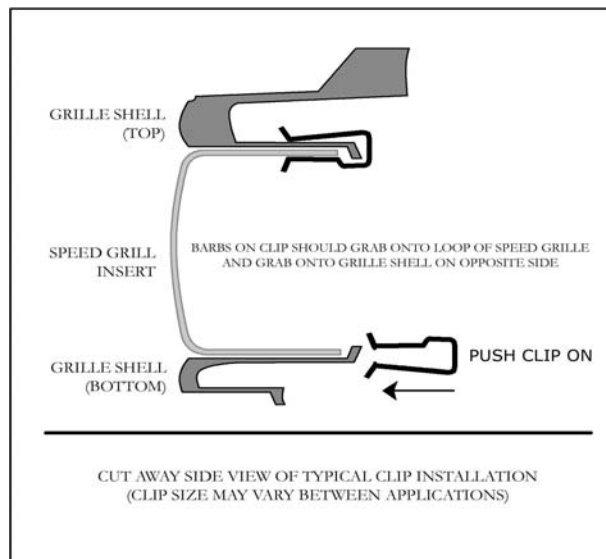

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119, D425,834, D421,585, D420,961, D420,960, D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

8/8/03 SSE 950-77143 & 950-78143