



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue
Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

**950-77157 SATIN FINISH
&
950-78157 CHROME FINISH
2001 - 2003
GMC DENALI
&
C-5 DENALI TRUCK
OEM VALANCE
GRILLE INSERT**


VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation. Installation time is approximately 30 minutes.

NOTE: A second person will aid in the installation

PARTS LIST					
1	Speed Grille Insert	1	Instruction Sheet	16	Installation Clips # 71099
1	Got Street Scene Decal	1	Street Scene Emblem	1	Speed Grille Care

TOOL LIST	
None Required	

1. Raise the front of vehicle to gain access to back side of front bumper cover.
2. Remove air deflector if so equipped. Take care not to damage fasteners. Save all parts for re-install.
3. Remove the OEM grille from opening.
4. Carefully insert the Speed Grille into opening taking caution not to scratch bumper cover. Have someone hold the Speed Grille in place, while accessing the back side. (If a second person is not available tape the Speed Grille to bumper cover on the front side).
5. Clip the Speed Grille to valance using eight clips across top and eight clips across bottom. Refer to photo for reference.
6. Re-install air deflector if removed.
7. Install the Street Scene emblem to grille face. Remove the protective cover.

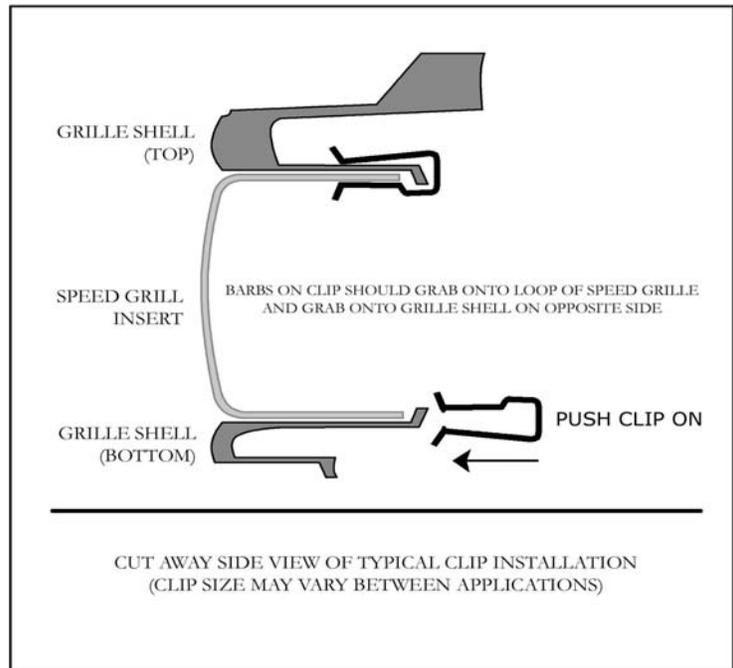

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119,D425,834,D421,585,D420,961,D420,960,D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.