



STREET SCENE EQUIPMENT, INC.

365 McCormick Avenue

Costa Mesa, Ca. 92626

Phone (714) 426-0590 Fax (714) 426-0591

INSTALLATION INSTRUCTIONS

950-77159 SATIN FINISH
&
950-78159 CHROME FINISH
2003 - 2005
GMC SIERRA
BUMPER COVER
SPEED GRILLE INSERTS

VERY IMPORTANT ! Read and understand all directions and check the following parts list before starting installation.

PARTS LIST					
1	RT Speed Grille Insert	1	Instruction Sheet	16	Installation Clips # 71099
1	LT Speed Grille Insert	1	Street Scene Emblem	1	Care For Grilles
1	Center Speed Grille Insert				


TOOL LIST

NOTE:

If installing bumper cover (P.N. 950-70159) Install Speed Grilles Prior To Installation Of Bumper Cover

1. Install center Speed Grille insert from the front side. Clip from behind using eight installation clips. Use four along the top side and four along the bottom side.
2. Install the RT and LT Speed Grille inserts in the same manner. Clip each with four installation clips. Two on the top and two on the bottom. The picture below will guide you on installing clips.

TYPICAL CLIP INSTALLATION

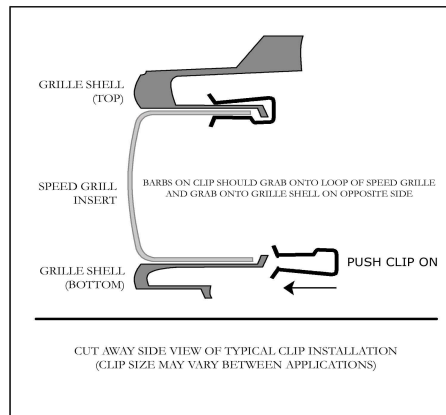

THE SPEED GRILLE™ may be covered by one or more of the following U.S. Patents: D427,119, D425,834, D421,585, D420,961, D420,960, D420,959, and D420,958 may be covered by one or more pending U.S. Patent applications.

08/02/05 SSE 950-77159 & 950-78159